SERVICE MANUAL

BG-1S CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-T25SN81	RM-870	New Zealand	SCC-K37F-A				

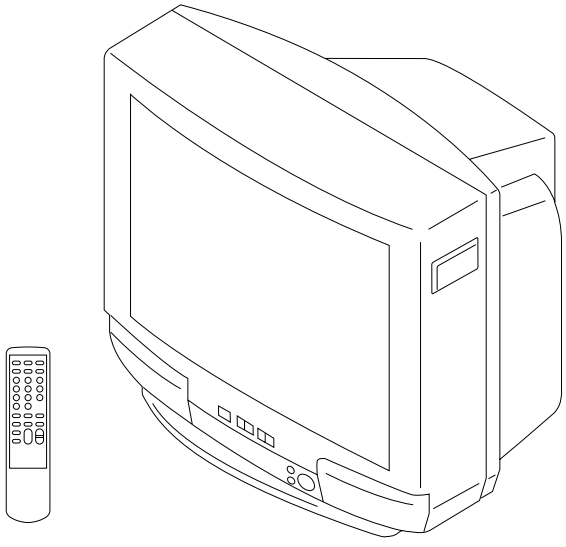

MICROFILM

TRINITRON® COLOR TV

SONY®

SPECIFICATIONS

		Note
Power requirements	110-240 V AC, 50/60 Hz	
Power consumption (W)	Indicated on the rear of the TV	
Television system	B/G	
Color system	PAL, PAL 60, NTSC4.43, NTSC3.58(AV IN)	
Stereo/Bilingual system	NICAM Stereo/Bilingual B/G, A2 Stereo/Bilingual (German) B/G	
Teletext Language	English, German, Swedish, Italian, French, Spanish	
Channel coverage	VHF : 1 to 11 / UHF : 21 to 69 / CATV: S01 to S03, S1 to S41	
Audio output (speaker)	5W × 2	
Inputs	Antenna: 75 ohms	
	VIDEO IN jacks: phono jacks Video: 1 Vp-p, 75 ohms Audio: 500 mVrms, high impedance	
Outputs	Headphone jack: minijack	
	MONITOR OUT jacks: phono jacks Video: 1 Vp-p, 75 ohms Audio: 500 mVrms	
Picture tube	25 in.	
Tube size (cm)	64	Measured diagonally
Screen size (cm)	60	Measured diagonally
Dimensions (w/h/d, mm)	613 × 542 × 472	
Mass (kg)	32	

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

Section	Title	Page
	SELF DIAGNOSIS FUNCTION	4
1.	**GENERAL**	5
2.	**DISASSEMBLY**	
2-1.	Rear Cover Removal	11
2-2.	A Board Removal	11
2-3.	F1 Board Removal	11
2-4.	Service Position	11
2-5.	Replacement of Parts	12
2-6.	Demagnetization Coil Removal	12
2-7.	Picture Tube Removal	13
3.	**SET-UP ADJUSTMENTS**	
3-1.	Beam Landing	14
3-2.	Convergence	15
3-3.	Focus Adjustment	17
3-4.	G2 (Screen) and White Balance Adjustments	17
4.	**CIRCUIT ADJUSTMENTS**	
4-1.	Adjustments with Commander	18
4-2.	Adjustment Method	19
4-3.	A Board Adjustment after IC003 (Memory) Replacement	22
4-4.	Picture Distortion Adjustment	22
5.	**DIAGRAMS**	
5-1.	Block Diagram	25
5-2.	Circuit Boards Location	29
5-3.	Schematic Diagrams and Printed Wiring Boards.	29
(1)	Schematic Diagram of A Board	33
(2)	Schematic Diagrams of A3, F1 and V1 Boards	37
(3)	Schematic Diagrams of C and VM Boards	45
5-4.	Semiconductors	48
6.	**EXPLODED VIEW**	
6-1.	Chassis	51
7.	**ELECTRICAL PARTS LIST**	53

SELF DIAGNOSIS FUNCTION

If no acknowledgement is returned from a device which is turned "ON", the device has a problem.
In this case, one of the LED's responding to the problem device will flicker a defined number of times.

Flickering is operated by lighting the LED's for 60ss each time.

The flickering frequency responding to each failed device is shown below.

Device	NONVOLATILE MEMORY	—	Y/C JUNGLE (IC300)	—	—	TONE CONTROL (IC201)
Flickering Frequency	1	—	3	—	—	6

All the devices are checked one after another from the left of the table.
If an error is found, the responding LED will start flickering.
So, if more than 1 device have failed, only the one on the left side will flicker.

SECTION 2
DISASSEMBLY

2-1. REAR COVER REMOVAL

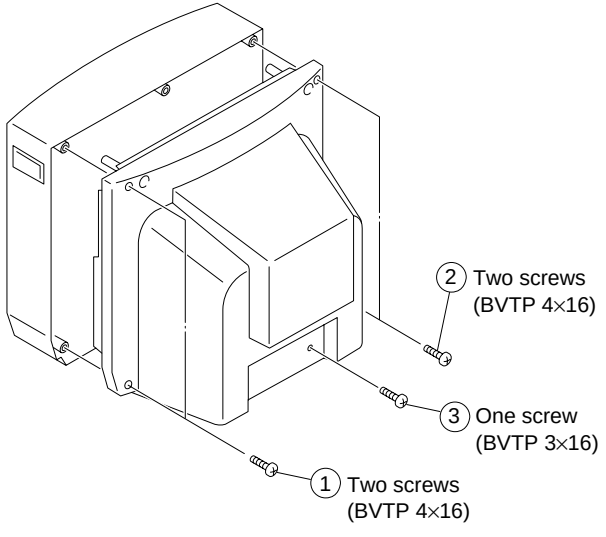

2-2. A BOARD REMOVAL

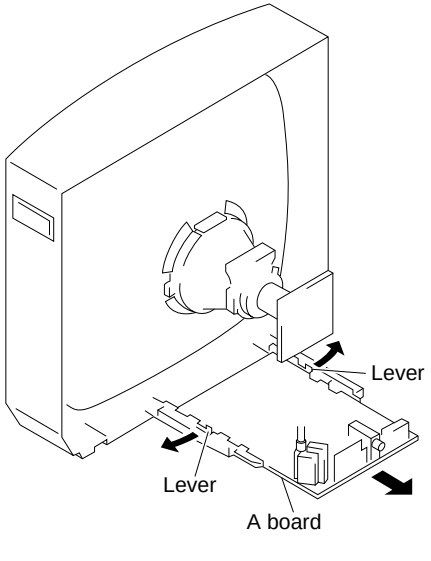

2-3. F1 BOARD REMOVAL

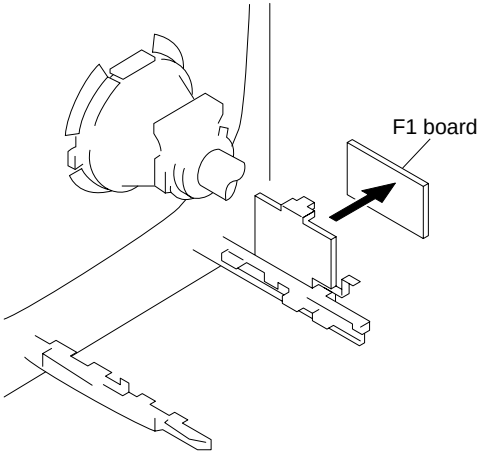

2-4. SERVICE POSITION

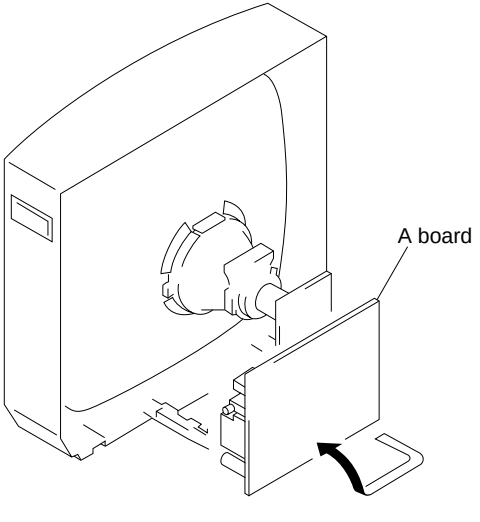

2-5. REPLACEMENT OF PARTS

For replacement of the Multi Button, Power Button and Light Guide, cut the welded portions from them, exchange with the new parts, and fix them with screws (+BVTP) respectively.

2-5-1. REPLACEMENT OF MULTI BUTTON

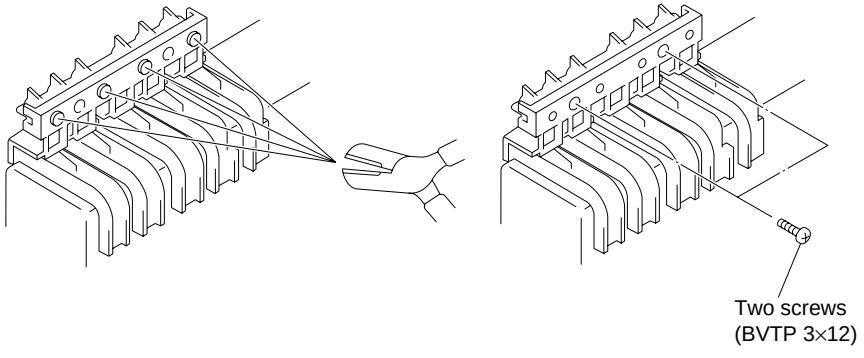

2-5-2. REPLACEMENT OF POWER BUTTON AND LIGHT GUIDE

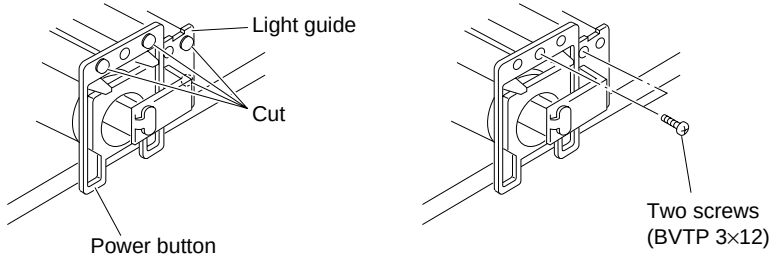

2-6. DEMAGNETIZATION COIL REMOVAL

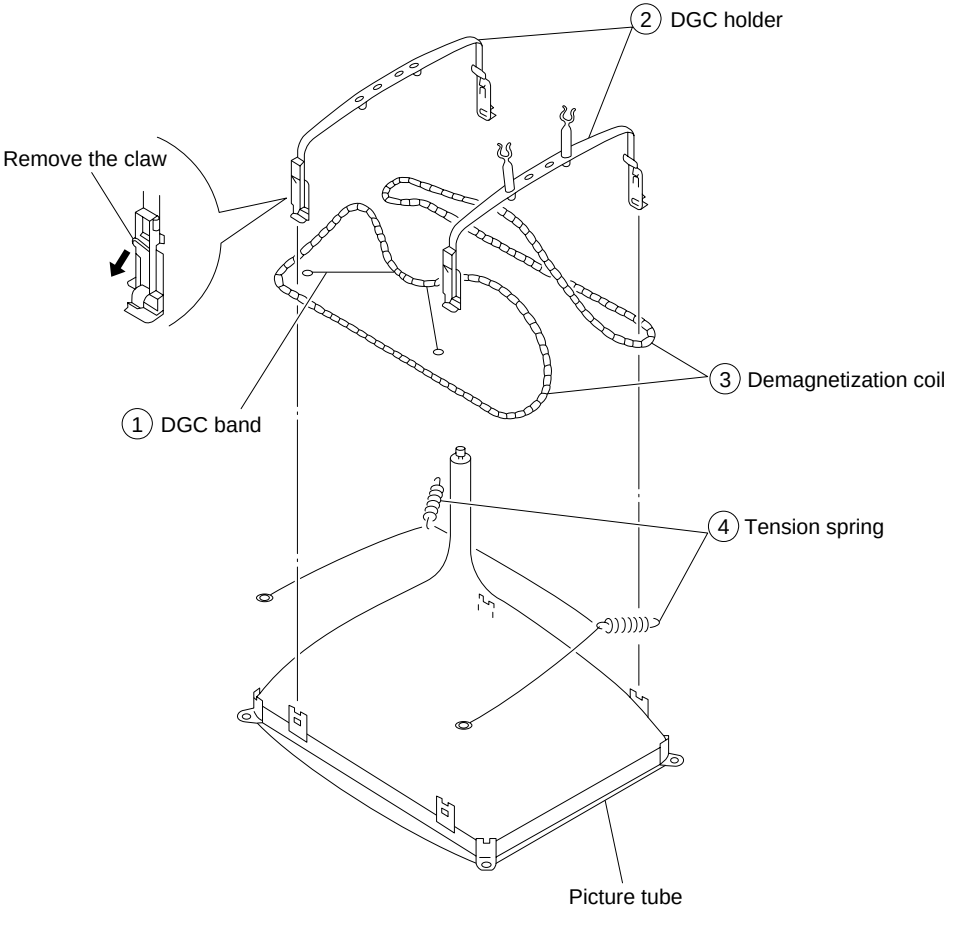

2-7. PICTURE TUBE REMOVAL

NOTE : The picture tube for this model are upside-down, and the position for the anode-cap and tension spring are changed accordingly.

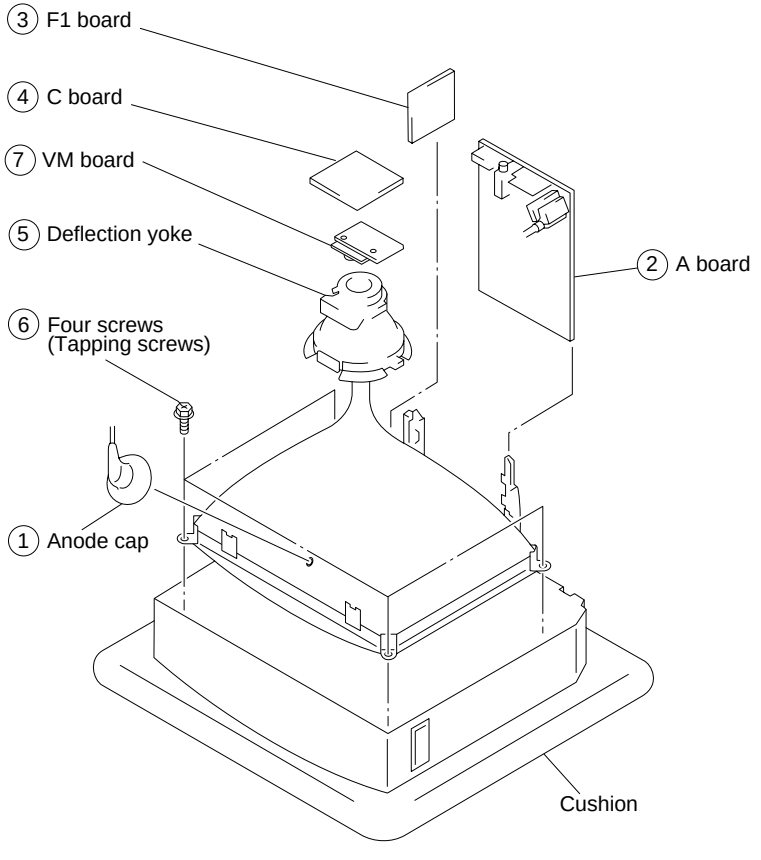

•REMOVAL OF ANODE-CAP

NOTE : After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.

•REMOVING PROCEDURES

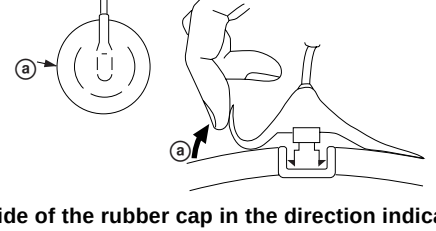

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.

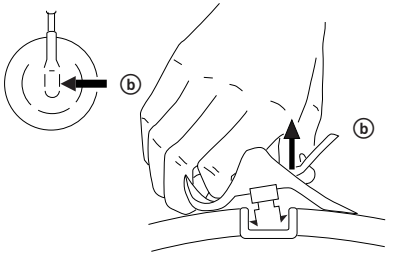

② Using a thumb press down then pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.

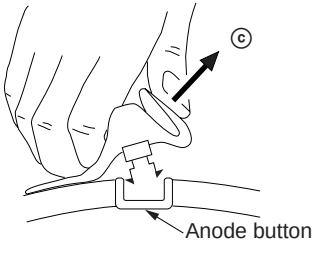

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ⓒ.

- **HOW TO HANDLE AN ANODE-CAP**

① Do not damage the surface of anode-caps with sharp shaped objects.
② Do not press the rubber too hard so as not to damage the inside of anode-caps. A metal fitting called the shatter-hook terminal is built into the rubber.
③ Do not turn the foot of rubber over too hard. The shatter-hook terminal will stick out or damage the rubber.

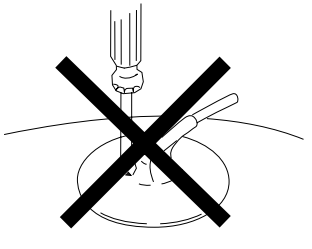

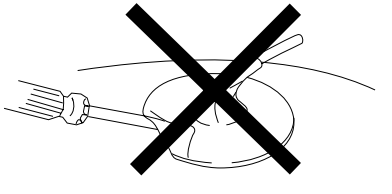

SECTION 3
SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switch should be set as follows unless otherwise noted:
PICTURE control ..... normal
BRIGHTNESS control ..... normal

Perform the adjustments in the following order :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Color-bar/Pattern Generator
2. Degausser
3. Oscilloscope

Preparation :

- In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
- Switch on the power and degauss with the degausser.

3-1. BEAM LANDING

1. Input a white signal with the pattern generator.
   Contrast, Brightness } normal
2. Position neck assy as shown in Figure 3-1.
3. Set the pattern generator raster signal to a green raster.
4. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side.
   (See Figures 3-1 through 3-3.)
5. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 3-1.)
6. Switch the raster signal to blue, then to red and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screw.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it.
   (See Figure 3-4.)

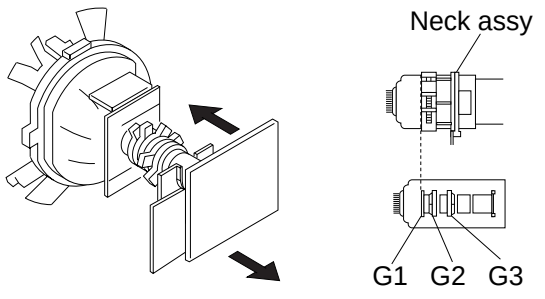

Fig. 3-1

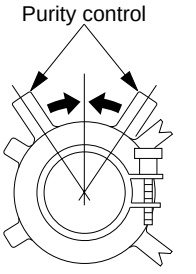

Fig. 3-2

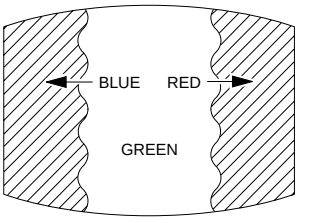

Fig. 3-3

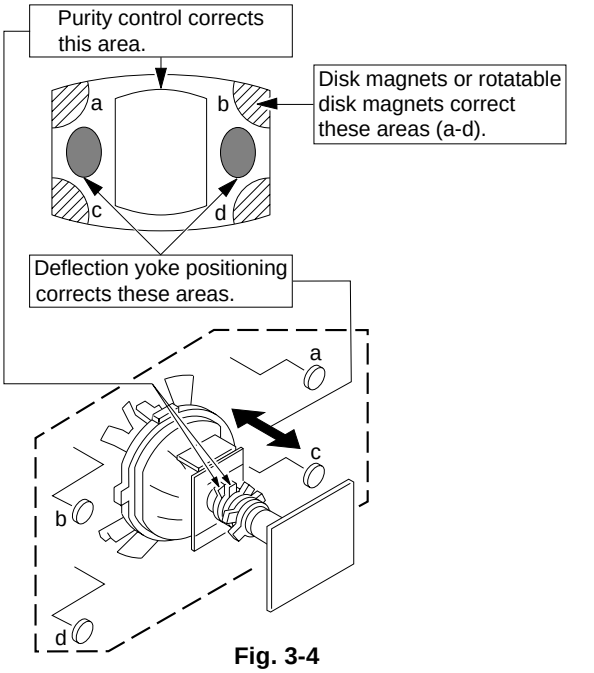

Fig. 3-4

3-2. CONVERGENCE

Preparation :

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.

(1) Horizontal and Vertical Static Convergence

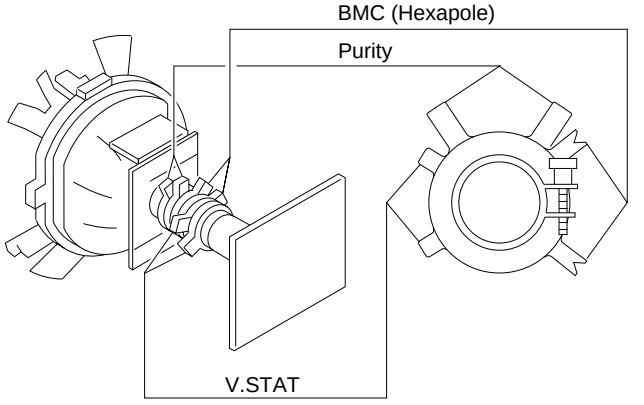

1. (Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots in the center of the screen are separated from each other.
2. Adjust the BMC (Hexapole) magnet so that the red, green and blue dots are aligned in a straight line.
3. Adjust the BMC (Hexapole) magnet so that the red, green and blue dots are balanced (ie. equal distance) on either side of the green dot.
4. (Moving horizontally), adjust the H.STAT VR magnet so that the red, green and blue dots converge on top of each other in the center of the screen.

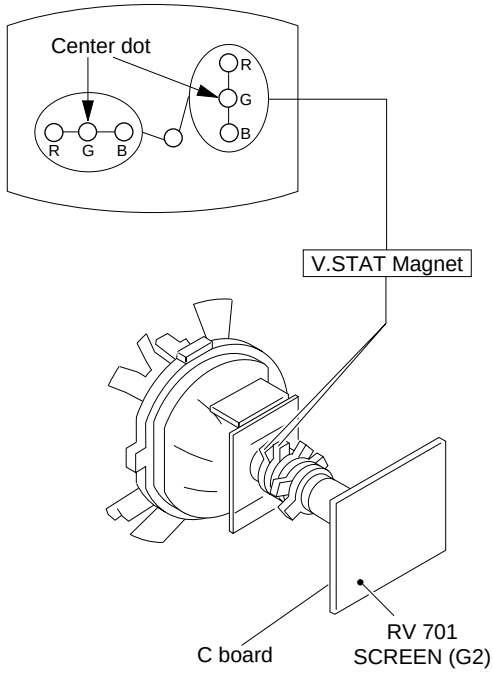

- Operation of the V.STAT magnet.
  If the V-STAT magnet is moved in the direction of the ⓐ and ⓑ arrows, the red, green and blue dots move as shown below.

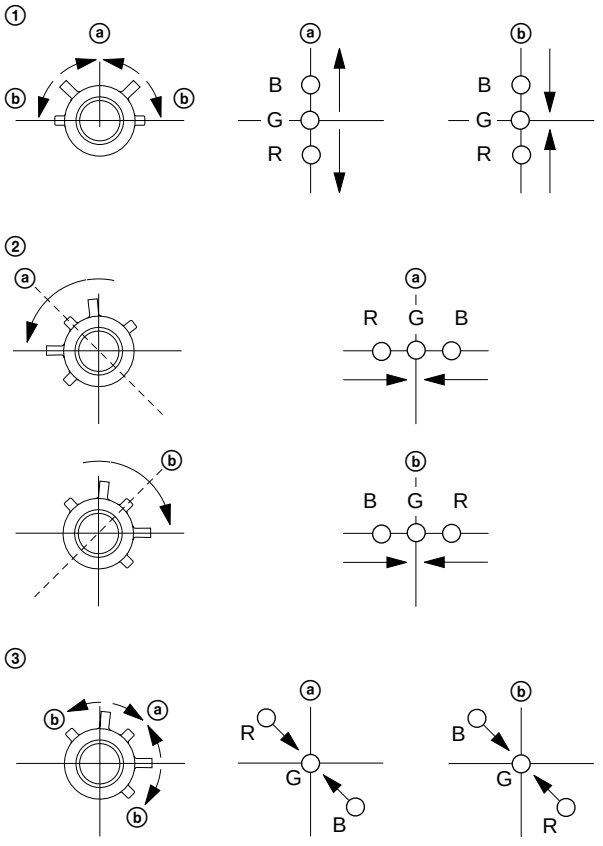

- Operation of BMC (Hexapole) Magnet.
  To align or balance the red, green and blue dots, adjust the BMC (Hexapole) magnet as shown below.

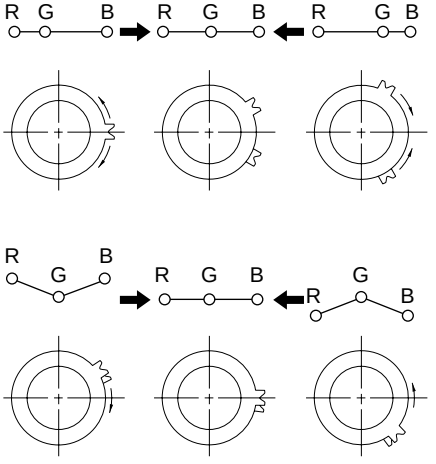

- The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking.
  Use the V. STAT magnet to adjust the red, green and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).

(2) Dynamic Convergence Adjustment

Preparation :

- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.

1. Slightly loosen the deflection yoke screws.
2. Remove the deflection yoke spacer.
3. Move the deflection yoke as shown in the figure below and optimize the convergence.
4. Tighten the deflection yoke screws.
5. Install the deflection yoke spacer.

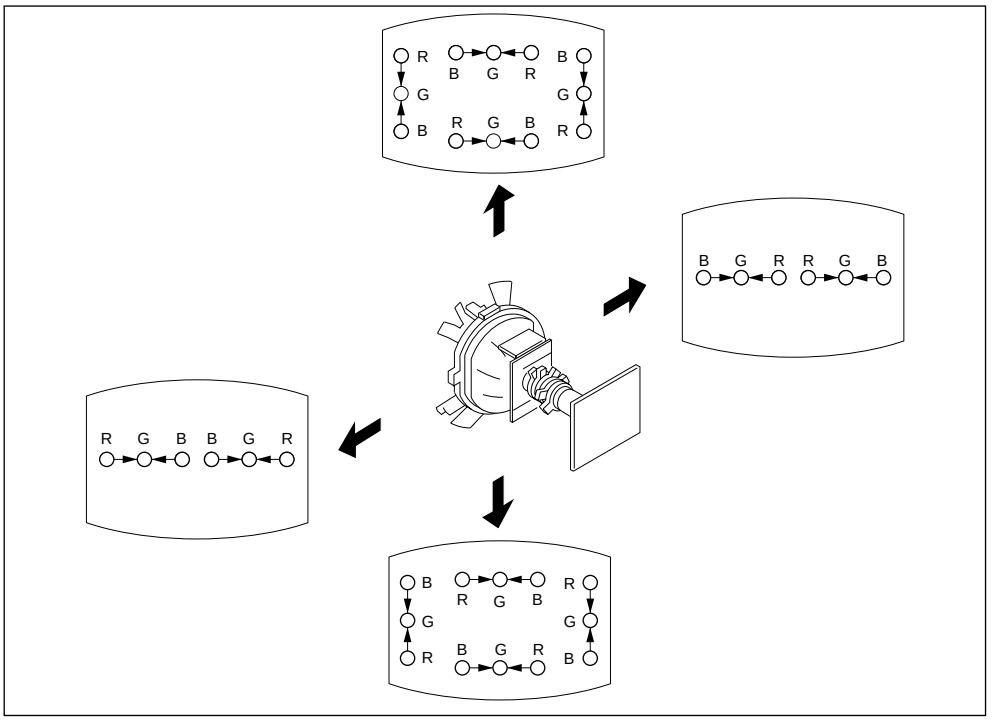

(3) Screen-corner Convergence

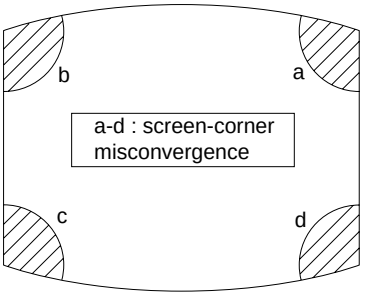

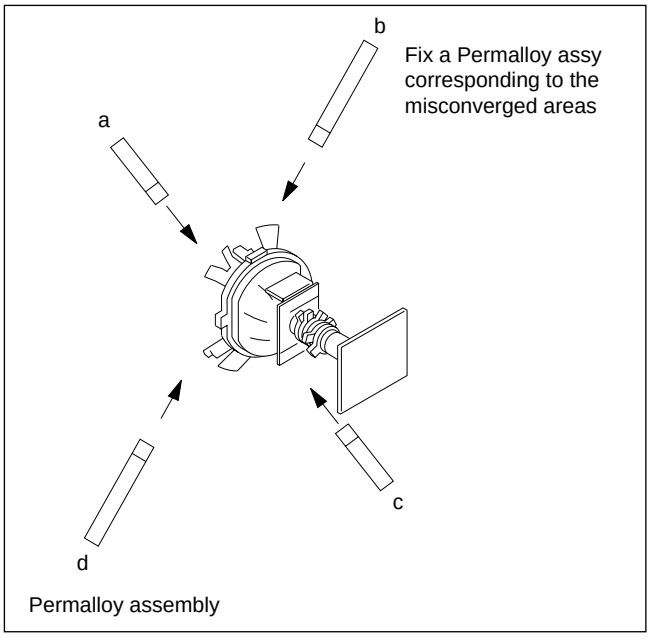

3-3. FOCUS ADJUSTMENT

Adjust FOCUS control on the flyback transformer for the best focus.

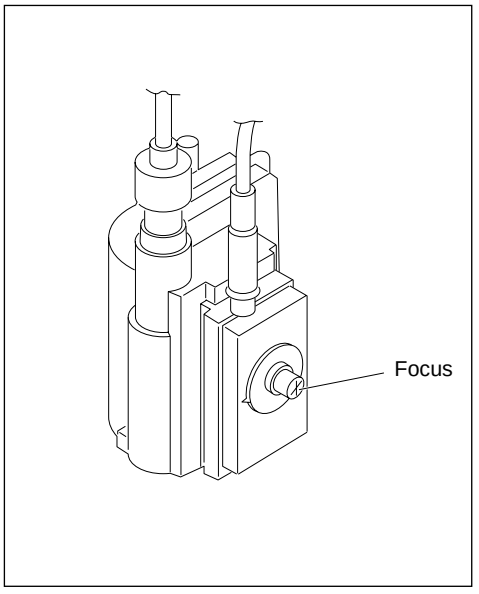

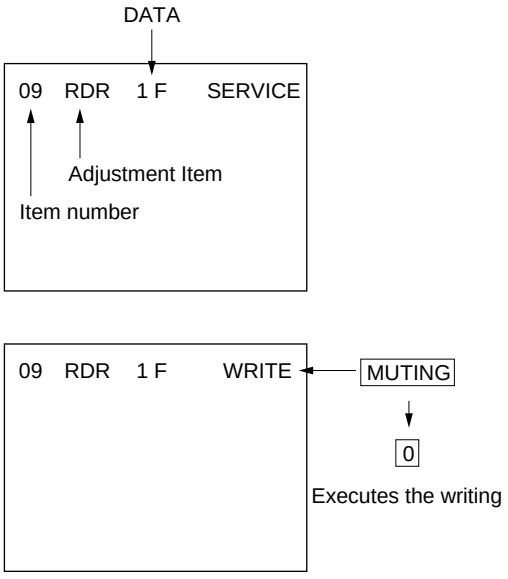

a. AN ITEM OF ADJUSTMENT

Item number	Adjustment item	Initial DATA	Note
09	RDR	25	WHITE POINT R
0A	GDR	20	WHITE POINT G
0B	BDR	20	WHITE POINT B

b. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press POWER button on the commander) and then press POWER button again, hereupon it becomes TV mode.

c. METHOD OF WRITE FOR MEMORY

1) Set to Service Mode.
2) Press 1 (UP) and 4 (DOWN) to select an item of adjustments.
3) Press MUTING button and it will indicate WRITE on screen.
4) Press 0 button to write into memory.

d. MEMORY WRITE CONFIRMATION METHOD

1) After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
2) Turn the power switch ON and set to Service Mode.
3) Call the adjusted items again to confirm adjustments were made.

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G2 (SCREEN) ADJUSTMENT (RV701)

1) Set the PICTURE and BRIGHTNESS to normal.
2) Put to VIDEO input mode without signals.
3) Connect R, G and B of the C board cathode to the oscilloscope.
4) Adjust G2 (RV701) volume to the value below.

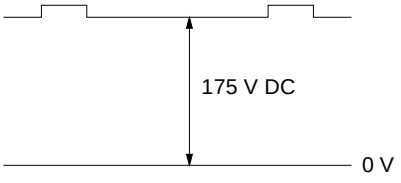

2. WHITE BALANCE ADJUSTMENTS

1) Set to Service Mode.
2) Input an entire white signal.
3) Set the PICTURE to maximum.
4) Select RDR(09) with 1 and 4 , and then set the level to 25 with 3 and 6 .
5) Select GDR(0A) and BDR(0B) with 1 and 4 and adjust the level with 3 and 6 for the best white balance.
6) Write into the memory by pressing MUTING → then 0 .

SECTION 4
CIRCUIT ADJUSTMENTS

4-1. ADJUSTMENTS WITH COMMANDER

Service adjustments are made with the RM-870 that comes with this unit.

Entering service mode

With the unit on standby

↓

[DISPLAY]

↓

[5]

↓

[VOL (+)]

↓

[POWER]

The operation sequence puts the unit into service mode.

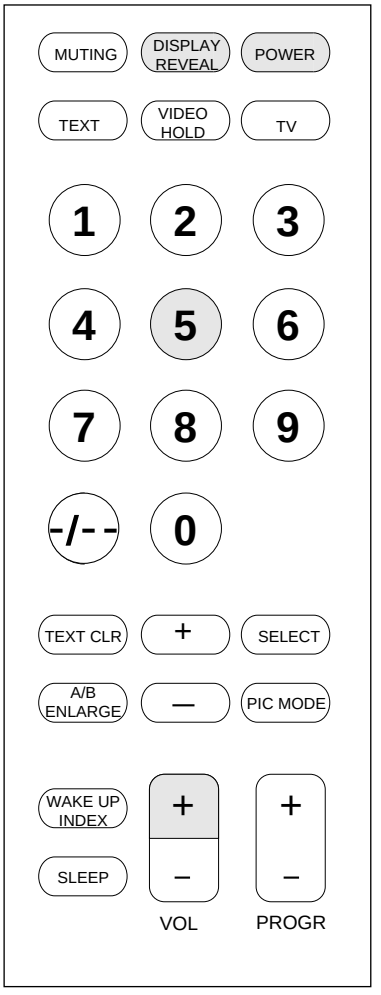

RM-870

[1], [4]	Raise/lower the service item number
[3], [6]	Raise/lower the data
[MUTING]	Writes
[0]	Executes the writing

[7], [0]	All the data becomes the values in memory
[8], [0]	All user control goes to the standard state
[5], [0]	Service data initialization (Be sure not to use usually.)
[2], [0]	Write 50Hz adjustment data to 60Hz, or vice versa.

The screen display is :

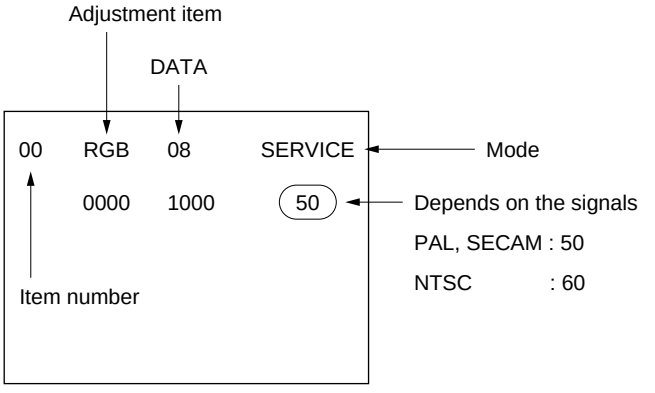

[1], [4]	Select the adjustment item.
↓	
[3], [6]	Raise/lower the data.
↓	
[MUTING]	Writes
↓	
[0]	Executes the writing.

4-2. ADJUSTMENT METHOD

Item Number 08

This explanation uses V-SHIFT as an example.

1. Select 08 V-SHIFT with the [1] and [4] buttons.
2. Raise/lower the data with the [3] and [6] buttons.
3. Select the optimum state. (The standard is 0F for PAL reception.)
4. Write with the [MUTING] button.
5. Execute the writing with the [0] button. (The WRITE display will be changed to green SERVICE.)

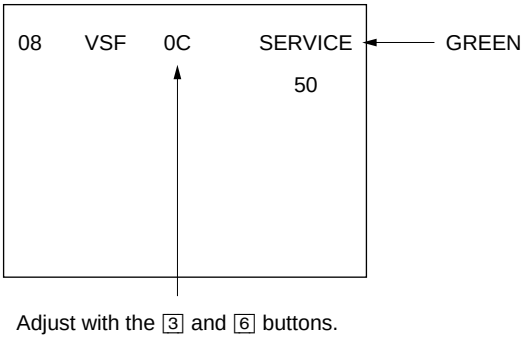

Adjust with the [3] and [6] buttons.

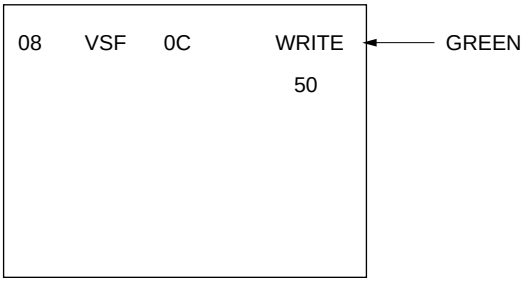

Written with the [MUTING].

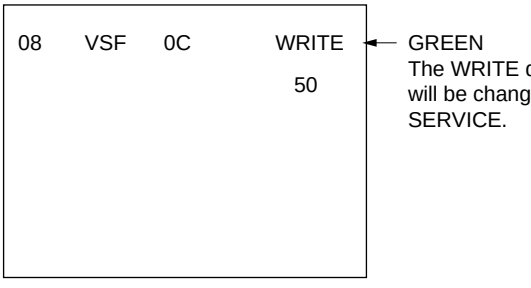

Write executed with [0].

Use the same method for Items Number 00-4B. Use [1] and [4] to select the adjustment item, use [3] and [6] to adjust, write with [MUTING], then execute the write with [0].

Adjustment Item Table

Item number	Adjustment Item	Data range	Initial data	Standard data	Note	Device
00	HSF	00–3F	24		H SHIFT	TDA8375A
01	HSZ	00–3F	23		H SIZE	TDA8375A
02	PAP	00–3F	21		PIN AMPLITUDE	TDA8375A
03	CNP	00–3F	29		CORNER PIN	TDA8375A
04	TLT	00–3F	20		TILT	TDA8375A
05	VSL	00–3F	20		V SLOPE	TDA8375A
06	VAP	00–3F	1D		V AMPLITUDE	TDA8375A
07	SCR	00–3F	20		S CORRECTION	TDA8375A
08	VSF	00–3F	20		V SHIFT	TDA8375A
09	RDR	00–3F	25		WHITE POINT R	TDA8375A
0A	GDR	00–3F	20		WHITE POINT G	TDA8375A
0B	BDR	00–3F	20		WHITE POINT B	TDA8375A
0C	FO	00–02	00	TV/VIDEO/TEXT	PHI-1 TIME CONSTANT	TDA8375A
0D	AGC	00–3F	30		AGC TAKE OVER	TDA8375A
0E	VSW	00–01	00		VIDEO MUTE	TDA8375A
0F	FOR	00–03	00		FORCED FIELD FREQ.	TDA8375A
10	DL	00–01	00		INTERLACE	TDA8375A
11	POC	00–01	00		SYNCHRO MODE FIX	TDA8375A
12	VID	00–01	00		VIDEO IDENT MODE	TDA8375A
13	HCO	00–01	00		EHT TRACKING MODE	TDA8375A
14	EVG	00–01	00		ENABLE V GUARD	TDA8375A
15	SBL	00–01	00		SERVICE BLANKING	TDA8375A
16	PRD	00–01	00		OVER-VOLTAGE INPUT	TDA8375A
17	COR	00–01	00		NOISE CORING PEAK	TDA8375A
18	PMX	00–3F	27		PICTURE MAX DATA	TDA8375A
19	PMI	00-3F	05		PICTURE MIN DATA	TDA8375A
1A	SBR	00–7F	4B		SUB-BRIGHTNESS	TDA8375A
1B	SHU	00–0F	07		SUB-HUE	TDA8375A
1C	SSH	00–03	01	TV/VIDEO	SUB-SHARPNESS	TDA8375A
1D	SC1	00–3F	1F		SUB-COLOR LOWER	TDA8375A
1E	SC2	00–3F	0B		SUB-COLOR HIGHER	TDA8375A
1F	AIP	00–7F	3F		ADJUSTMENT IF PLL	TDA8375A
20	VZM	00–3F	19		VERTICAL ZOOM	TDA8375A
21	FAW	00–FF	08		NICAM FAW THRESH	MSP3410
22	CTM	00–FF	08		NICAM ERROR BIT (MONO)	MSP3410
23	CTN	00–FF	50		NICAM ERROR BIT (NICAM)	MSP3410
24	WCD	00–FF	0A		W. G. CHANGE DATA	MSP3410
25	WST	00–FF	15		W. G. STEREO CUT POINT	MSP3410
26	WTM	00–FF	50		W. G. TIMER CHANGE	MSP3410
27	WBT	00–FF	EA		W. G. BILINGUAL	MSP3410
28	ACG	00–01	01		AGC AUTO/CONSTANT	MSP3410
29	CDB	00–3F	28		AGC GAIN CONSTANT	MSP3410
2A	FGP	00–7F	24		FM (BG, I, DK) PRESCALE	MSP3410
2B	FMP	00–7F	40		FM (M) PRESCALE	MSP3410
2C	WGP	00–7F	3C		W. G. PRESCALE	MSP3410
2D	NIP	00–7F	7F		NICAM PLESCALE	MSP3410
2E	CRM	00–01	00		CARRIOR MUTE	MSP3410
2F	CML	00–03	00		AUDIO CLOCK OUT	MSP3410
31	WAC	00–01	01		W. G. AGREEMENT COUNT	MSP3410
32	DLY	00–FF	30		STEREO SEARCH DELAY	MSP3410
33	DLG	00–FF	10		INTERVAL OF ID CHECK	MSP3410
34	TXP	00–0F	09		TEXT PICTURE	SAA5281
35	MXP	00–0F	0D		TEXT MIX MODE PICTURE	SAA5281

Adjustment Item Table

Item number	Adjustment Item	Data range	Initial data	Standard data	Note	Device
36	BKP	00–3F	00		BLK OFF PICTURE	μ. CON
37	HBL	00–3F	25		H BLK LEFT WIDTH	μ. CON
38	HBR	00–3F	20		H BLK RIGHT WIDTH	μ. CON
39	VBH	00–7F	00		V BLK HIGHT WIDTH	μ. CON
3A	VBL	00–FF	FF		V BLK LOW WIDTH	μ. CON
3B	ODL	00–FF	10		POWER ON DELAY	μ. CON
3C	OFR	00–0F	00		STBY → ON RGB OUT	μ. CON
3D	OFM	00–0F	00		MAIN POWER RGB OUT	μ. CON
3E	OSH	00–3F	0A		OSD POSITION H	μ. CON
3F	DKS	00–01	00		D/K NICAM	μ. CON
40	MUT	00–01	01		NO SYNC. MUTE	μ. CON
41	DWZ	00–01	00		DISEBLE WIDEZOOM	μ. CON
42	ABL	00–01	01		BRIGHT ABL	μ. CON
43	DTV	00–01	00		DISABLE TV SYSTEM KEY	μ. CON
44	SCM	00–01	00		SECAM TRAP ACTIVE	μ. CON
45	ROC	00–0F	07		ROTATION CENTER	μ. CON
46	ROS	00–07	03		ROTATION STEP WIDTH	μ. CON
47	DVM	00–01	00		DISABLE VM MUTE	μ. CON
48	FBT	00–01	01		C/M FBT LAYER SHORT	μ. CON
49	OP0	00–FF	40	Refer to table below	OPTION 0	μ. CON
4A	OP1	00–FF	07	Refer to table below	OPTION 1	μ. CON
4B	OP2	00–FF	00	Refer to table below	OPTION 2	μ. CON

NOTE

- Standard Data: Those are the standard data values written on the microprocessor. Therefore, the data values of the modes are stored respectively in the memory.
  In case of a device replacement, adjustment by rewriting the data value is necessary for some items.
- 50 ..... 50 Hz data
- 60 ..... 60 Hz data
- Standard data listed on the adjustment item table are reference values, therefore it is different for every model.

ITEM INFORMATION

- 10. DL: TV/MIX Mode 0=Interlace 1=Non interlace, TEXT Mode 0=Non interlace 1=Interlace
- 42. ABL: Bright ABL ON/OFF ON=1 OFF=0
- 49. OP0, • 4A. OP1, • 4B. OP2 :
  Input data are different according to models.
  AV INPUT : 00 → NO MODEL, 01 → MONO, CXA1315, 10/11 → STEREO, TDA8424
  TV System : 00 → Multi model, 01 → B/G, 10 → D/K, I, 11 → B/G, D/K
  NTSC, SECAM, Chin
  Shrp : Dynamic Mode @ 1 → Sharpness 50%, 0 → Sharpness 70%.
  VM Operation : 0 → OFF, 1 → ON

No. 49 OP0 * Input data are different according to models

Item	–	AV Input		Shrp 50%	Remote Preset	Auto Program	Video Text	Reserved
KV-T25SN81	0	1	0	0	0	0	0	0

No. 4A OP1

Item	–	TILT	–	TV System		NTSC 3.58	SECAM	Chinese
KV-T25SN81	0	0	0	0	1	1	0	1

No. 4B OP2

Item	–	Sound Mode	Child Lock	Sound Effer	High Dev.	100 Program	4:3 Wide	S. Video
KV-T25SN81	0	0	0	0	0	0	0	0

4-3. A BOARD ADJUSTMENT AFTER IC003 (MEMORY) REPLACEMENT

1. Enter to Service Mode.

2. Press commander buttons [5] and [0] (Data Initialize), and [2] and [0] (Data Copy) to initialize the data.

3. Call each item number, and check if the respective screen shows the normal picture.
   In case some items are not well-adjusted, give them fine adjustment.
   Write the data per each item number ([MUTING] + [0]).

4. Select item numbers “49” (OP0), “4A” (OP1) and “4B” (OP2) and respectively set the bit per model with command buttons [3] and [6].

5. Press commander buttons [8] and [0] (Test Normal) to return to the data that was set on the shipment from the factory.
   (= Cancel Service Mode.)

4-4. PICTURE DISTORTION ADJUSTMENT

Item Number 00 – 08

00 HSF (H SHIFT)



01 HSZ (H SIZE)



02 PAP (PIN AMPLITUDE)



03 CNP (CORNER PIN)



04 TLT (TILT)



05 VSL (V SLOPE)



06 VAP (V AMPLITUDE)



07 SCR (S CORRECTION)



08 VSF (V SHIFT)



MEMO

MEMO

5-4. SEMICONDUCTORS

DIODE

D1NL20
EL1Z
GP08D
RGP02-17EL-6433



RD3.6M-B2
RD5.6M-B2



DA204K



DAN202K



DAP202K



ERC06-15S
RN4Z
S3L20UF4



LN4SB60



LNK0220022G



DTZ9.1
MA113-(TX)
RD13ES-B2
RD2.2ES-B2
RD3.6ES-B1
RD39ES-B2
RD4.7ES-B2
RD5.1ES-B1
RD5.6ES-B2
1SS119-25



RD9.1ES-L2



ERD29-08J
RU4AM-T3

5P-6M



TRANSISTOR

DTA114EKA-T146
DTC114EKA-T146
UN2211
UN2213
UN2216
2SA1037K-T-146-QR
2SA1162-G
2SC1623-L5L6
2SC2712-YG
2SD601A-Q

2SA1091-0

2SA1175-HFE
2SC2410SN
2SC2785-HFE



2SC3209LK
2SC3733
2SD774-34



2SC2611



2SC2669-0



2SC4793



2SC4927-01



2SA1837
2SD2394-EF
2SD2394-F



KV-T25SN81
RM-870

IC

ST24C08FB6 (8PIN)
CXA1110BS (30PIN)
CXP85224A-072S (64PIN)
P83C654FBP/540 (40PIN)
SAA5281ZP/E (52PIN)
TDA4665T/V5-118 (16PIN)
TDA8375A (56PIN)
TDA8424 (20PIN)

Dual In-line Package
Pin 6～98

L78LR05D-MA



PC123F2



SBX1981-11

SE135N

STR-S6708N

MARKING SIDE VIEW



Zig-zag In -line Package
Pin 6～99

KV-T25SN81
RM-870

UPC4558G2 (8PIN)



Single In -line Package
Pin 6～98

NJM78L12A



LA7830



TA8223K



UPC574J



PQ09RE11



NJM2234L

MSP3410D-PP-B4

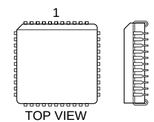

Quad Flat J-leaded Package
Pin 20～996

TA7805S



SECTION 6
EXPLODED VIEW

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

6-1. CHASSIS

●: BVTP3 × 12 7-685-648-79
■: BVTP4 × 16 7-685-663-71
▲: BVTP3 × 16 7-685-650-79

NOTE : The picture tube for this model are upside-down, and the position for the anode-cap and tension spring are changed accordingly.

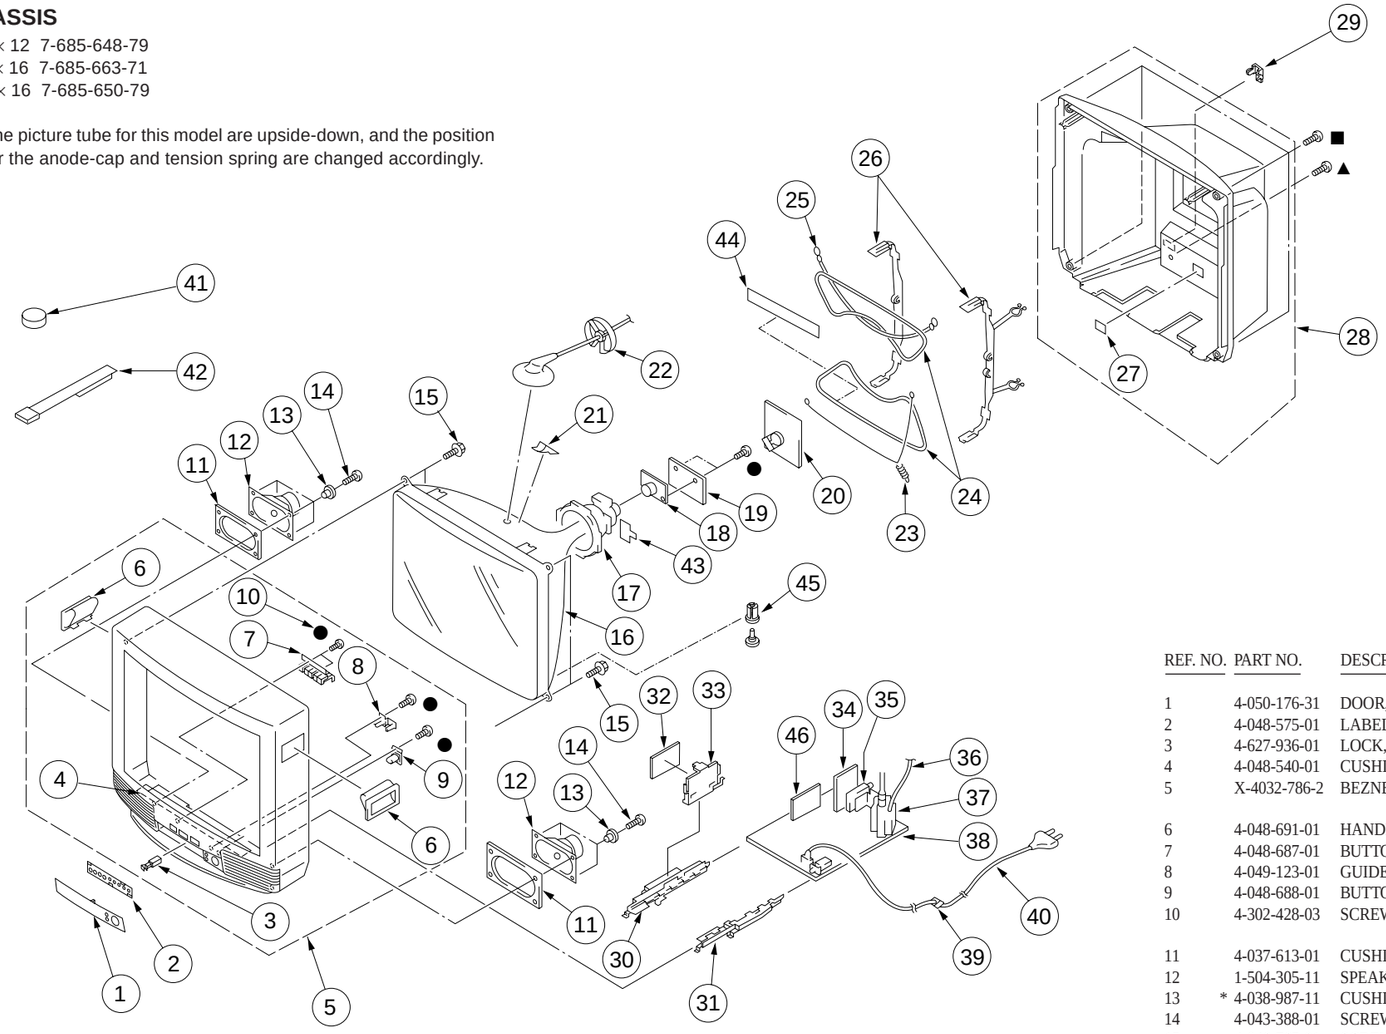

REF. NO.		PART NO.	DESCRIPTION	REMARK
1		4-050-176-31	DOOR, CONTROL	
2		4-048-575-01	LABEL, CONTROL	
3		4-627-936-01	LOCK, MINIATURE SIDE	
4		4-048-540-01	CUSHION, CRT	
5		X-4032-786-2	BEZNET ASSY	3, 4, 6-10
6		4-048-691-01	HANDLE	
7		4-048-687-01	BUTTON, MULTI	
8		4-049-123-01	GUIDE, LIGHT	
9		4-048-688-01	BUTTON, POWER	
10		4-302-428-03	SCREW (WASHER HEAD) (+P 3X12)	
11		4-037-613-01	CUSHION, SP	
12		1-504-305-11	SPEAKER (5X12CM)	
13	*	4-038-987-11	CUSHION, SPEAKER	
14		4-043-388-01	SCREW, STEP TAPPING	
15		4-046-765-01	SCREW, TAPPING 7 + CROWN WASHER	
16	⚠	8-733-255-05	PICTUTE TUBE (M60KWL70X)	
17	⚠	8-451-404-42	DEFLECTION YOKE (Y25GXAS)	
18		1-452-762-31	NECK ASSEMBLY NA294	
19	*	A-1342-396-A	VM BOARD, MOUNTED	
20	*	A-1331-743-A	C BOARD, MOUNTED	
21		4-046-600-11	SPACER, DY	
22	*	3-704-372-11	HOLDER, HV CABLE	
23		4-369-318-61	SPRING, TENSION	
24	⚠	1-403-619-11	COIL, DEMAGNETIZATION	
25		4-043-827-11	BAND, DEGAUSSING COIL	

REF. NO.		PART NO.	DESCRIPTION	REMARK
26	*	4-042-988-01	HOLDER, DGC	
27		4-049-416-01	SHEET, BLIND	
28	⚠	X-4032-967-1	COVER ASSY, REAR	27
29		4-049-130-01	CLAMPER, CORD	
30	*	4-048-690-01	RAIL (L), GUIDE	
31	*	4-048-689-01	RAIL (R), GUIDE	
32	*	A-1241-190-A	F1 BOARD, MOUNTED	
33	*	4-049-158-01	BRACKET, F1 PC BOARD	
34	*	A-1297-523-A	A3 BOARD, COMPLETE	
35	⚠	8-598-323-50	TUNER, VSS BT-AG401	
36	⚠	1-900-212-02	LEAD ASSY, FOCUS	
37	⚠	1-453-190-11	TRANSFORMER ASSY, FLYBACK (NX-2743//M3B)	
38	*	A-1298-964-A	A BOARD, COMPLETE	
39	⚠	4-389-778-11	HOLDER, AC CORD	
40	⚠	1-574-358-12	CORD, POWER (WITH CONNECTOR)	7.5A/250V
41		1-452-032-00	MAGNET,DISC	
42		X-4387-214-3	PERMALOY ASSY, CORRECTION	
43		4-034-272-01	PLATE, CORRECTION, TLV	
		4-034-272-41	PLATE, CORRECTION, TLV	
44	*	4-045-290-11	CUSHION (50X290), DGC	
45		4-049-122-01	RIVET	
46	*	A-1347-103-A	V1 BOARD, COMPLETE	

SECTION 7
ELECTRICAL PARTS LIST

A

NOTE:

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS
- All resistors are in ohms
- F : nonflammable

CAPACITORS
- MF : μF, PF : μμF

COILS
- MMH : mH, UH : μH

REF. NO.	PART NO.	DESCRIPTION			REMARK
*	A-1298-964-A	A BOARD, COMPLETE			
		**********			
*	1-580-798-11	CONNECTOR PIN (DY) 6P			
	4-039-460-01	HOLDER, FBT			
*	4-049-131-01	CASE (A), SHIELD			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
	7-682-950-01	SCREW +PSW 3X12			
	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3			
		<CAPACITOR>			
C001	1-163-011-11	CERAMIC CHIP	0.0015MF	10%	50V
C002	1-126-965-11	ELECT	22MF	20%	50V
C004	1-126-961-11	ELECT	2.2MF	20%	50V
C007	1-126-959-11	ELECT	0.47MF	20%	50V
C008	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C009	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C010	1-163-037-11	CERAMIC CHIP	0.022MF	10%	50V
C011	1-104-664-11	ELECT	47MF	20%	16V
C013	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C014	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C015	1-101-884-00	CERAMIC	56PF	5%	50V
C016	1-101-884-00	CERAMIC	56PF	5%	50V
C017	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C019	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C020	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C021	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C022	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C023	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C024	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C025	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C026	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C027	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C028	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C029	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C034	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C035	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C036	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C037	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C038	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C040	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C042	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C044	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C045	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C046	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C047	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C048	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C049	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C050	1-126-960-11	ELECT	1MF	20%	50V
C051	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C052	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C053	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C055	1-126-941-11	ELECT	470MF	20%	16V
C056	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C057	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C058	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C059	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C060	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C061	1-164-505-11	CERAMIC CHIP	2.2MF		16V
C072	1-126-941-11	ELECT	470MF	20%	16V
C074	1-163-001-11	CERAMIC CHIP	220PF	10%	50V
C101	1-163-029-11	CERAMIC CHIP	0.0047MF		50V
C105	1-104-665-11	ELECT	100MF	20%	16V
C106	1-126-964-11	ELECT	10MF	20%	50V
C108	1-126-942-61	ELECT	1000MF	20%	16V
C109	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C110	1-136-165-00	FILM	0.1MF	5%	50V
C111	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C114	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C115	1-163-093-00	CERAMIC CHIP	10PF	5%	50V
C116	1-136-165-00	FILM	0.1MF	5%	50V
C117	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C118	1-126-965-11	ELECT	22MF	20%	50V
C119	1-163-059-00	CERAMIC CHIP	0.01MF		50V
C120	1-130-493-00	MYLAR	0.068MF	5%	50V
C121	1-130-493-00	MYLAR	0.068MF	5%	50V
C122	1-104-665-11	ELECT	100MF	20%	16V
C124	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C125	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C127	1-163-077-00	CERAMIC CHIP	0.1MF	10%	25V
C128	1-163-077-00	CERAMIC CHIP	0.1MF	10%	25V
C132	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C201	1-126-960-11	ELECT	1MF	20%	50V
C202	1-104-665-11	ELECT	100MF	20%	16V
C203	1-126-960-11	ELECT	1MF	20%	50V
C204	1-104-665-11	ELECT	100MF	20%	16V
C205	1-163-989-11	CERAMIC CHIP	0.033MF	10%	25V
C206	1-163-018-00	CERAMIC CHIP	0.0056MF	10%	50V
C207	1-126-961-11	ELECT	2.2MF	20%	50V
C208	1-126-961-11	ELECT	2.2MF	20%	50V
C209	1-163-018-00	CERAMIC CHIP	0.0056MF	10%	50V
C210	1-163-989-11	CERAMIC CHIP	0.033MF	10%	25V
C211	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C233	1-104-664-11	ELECT	47MF	20%	16V
C234	1-104-664-11	ELECT	47MF	20%	16V
C235	1-104-664-11	ELECT	47MF	20%	16V

KV-T25SN81
RM-870

A

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION			REMARK
C236	1-126-968-11	ELECT	100MF	20%	35V
C237	1-104-665-11	ELECT	100MF	20%	16V
C238	1-136-167-00	FILM	0.15MF	5%	50V
C239	1-104-665-11	ELECT	100MF	20%	16V
C240	1-136-167-00	FILM	0.15MF	5%	50V
C241	1-126-942-61	ELECT	1000MF	20%	25V
C242	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C243	1-128-551-11	ELECT	22MF	20%	25V
C244	1-126-942-61	ELECT	1000MF	20%	25V
C246	1-128-551-11	ELECT	22MF	20%	25V
C247	1-126-942-61	ELECT	1000MF	20%	25V
C253	1-104-665-11	ELECT	100MF	20%	16V
C257	1-136-169-00	FILM	0.22MF	5%	50V
C258	1-136-169-00	FILM	0.22MF	5%	50V
C300	1-104-664-11	ELECT	47MF	20%	16V
C304	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C305	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C306	1-216-295-91	SHORT	0		
C307	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C308	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C309	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C310	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C311	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C312	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C313	1-104-665-11	ELECT	100MF	20%	16V
C314	1-164-161-11	CERAMIC CHIP	0.0022MF	10%	50V
C315	1-165-320-11	CERAMIC CHIP	0.47MF	10%	16V
C316	1-102-125-00	CERAMIC	0.0047MF	10%	50V
C319	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C320	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C321	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C322	1-216-295-91	SHORT	0		
C323	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C324	1-115-565-11	CERAMIC CHIP	2.2MF	10%	10V
C325	1-163-093-00	CERAMIC CHIP	10PF	5%	50V
C326	1-163-095-00	CERAMIC CHIP	12PF	5%	50V
C327	1-163-093-00	CERAMIC CHIP	10PF	5%	50V
C328	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C329	1-163-016-00	CERAMIC CHIP	0.0039MF	10%	50V
C330	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C331	1-126-964-11	ELECT	10MF	20%	50V
C332	1-136-165-00	FILM	0.1MF	5%	50V
C333	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C334	1-164-182-11	CERAMIC CHIP	0.0033MF	10%	50V
C335	1-102-973-00	CERAMIC	100PF	5%	50V
C336	1-126-964-11	ELECT	10MF	20%	50V
C337	1-104-665-11	ELECT	100MF	20%	16V
C338	1-165-320-11	CERAMIC CHIP	0.47MF	10%	16V
C339	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C340	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C341	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C342	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C344	1-126-963-11	ELECT	4.7MF	20%	50V
C349	1-128-551-11	ELECT	22MF	20%	25V
C359	1-104-665-11	ELECT	100MF	20%	16V
C361	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C362	1-163-101-00	CERAMIC CHIP	22PF	5%	50V
C367	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C368	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C369	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C370	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C374	1-126-967-11	ELECT	47MF	20%	50V
C375	1-126-967-11	ELECT	47MF	20%	50V
C376	1-164-005-11	CERAMIC CHIP	0.47MF		25V
C401	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C402	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C403	1-126-965-11	ELECT	22MF	20%	50V
C404	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C405	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C406	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C407	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C408	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C410	1-163-103-00	CERAMIC CHIP	27PF	5%	50V
C411	1-163-113-00	CERAMIC CHIP	68PF	5%	50V
C413	1-104-665-11	ELECT	100MF	20%	16V
C415	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C420	1-104-664-11	ELECT	47MF	20%	16V
C423	1-163-129-00	CERAMIC CHIP	330PF	5%	50V
C425	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C501	1-102-228-00	CERAMIC	470PF	10%	500V
C523	1-104-665-11	ELECT	100MF	20%	16V
C548	1-106-220-00	MYLAR	0.1MF	10%	100V
C551	1-126-968-11	ELECT	100MF	20%	35V
C552	1-126-968-11	ELECT	100MF	20%	35V
C553	1-163-019-00	CERAMIC CHIP	0.0068MF	10%	50V
C554	1-102-244-00	CERAMIC	220PF	10%	500V
C555	1-101-804-00	CERAMIC	10PF	5%	500V
C562	1-104-665-11	ELECT	100MF	20%	16V
C601	1-162-318-11	CERAMIC	0.001MF	10%	500V
C602	1-102-050-00	CERAMIC	0.01MF	99%	500V
C603	1-161-830-00	CERAMIC	0.0047MF	99%	500V
C604	1-113-608-11	ELECT(BLOCK)	470MF	20%	400V
C605	1-161-830-00	CERAMIC	0.0047MF	99%	500V
C606	1-161-830-00	CERAMIC	0.0047MF	99%	500V
C607	1-161-830-00	CERAMIC	0.0047MF	99%	500V
C608	1-104-332-11	CERAMIC	470PF	10%	2KV
C609	1-124-347-00	ELECT	100MF	20%	160V
C610	1-126-943-11	ELECT	2200MF	20%	25V
C611 ⚠	1-113-900-51	CERAMIC	470PF	10%	250V
C612	1-102-228-00	CERAMIC	470PF	10%	500V
C613	1-102-824-00	CERAMIC	470PF	5%	50V
C614	1-126-943-11	ELECT	2200MF	20%	25V
C616	1-102-228-00	CERAMIC	470PF	10%	500V
C618	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C619	1-162-116-00	CERAMIC	680PF	10%	2KV
C621 ⚠	1-104-705-51	FILM	0.1MF	20%	250V
C622	1-106-383-00	MYLAR	0.047MF	10%	200V
C623	1-126-934-11	ELECT	220MF	20%	16V
C624	1-126-942-61	ELECT	1000MF	20%	16V
C625	1-102-074-00	CERAMIC	0.001MF	10%	50V
C627	1-162-116-00	CERAMIC	680PF	10%	2KV
C630 ⚠	1-113-900-51	CERAMIC	470PF	10%	250V
C631	1-161-830-00	CERAMIC	0.0047MF	99%	500V
C632 ⚠	1-113-900-51	CERAMIC	470PF	10%	250V
C633	1-161-754-00	CERAMIC	0.001MF	10%	3KV
C634	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C801	1-123-024-21	ELECT	33MF		160V
C802	1-107-364-11	MYLAR	0.01MF	10%	200V
C804	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C805	1-102-244-00	CERAMIC	220PF	10%	500V

A

REF. NO.	PART NO.	DESCRIPTION			REMARK
C806	1-126-960-11	ELECT	1MF	20%	50V
C807	1-136-540-11	FILM	0.82MF	5%	200V
C808	1-130-959-91	FILM	0.047MF	5%	400V
C809	1-162-115-00	CERAMIC	330PF	10%	2KV
C810	1-106-365-00	MYLAR	0.0082MF	99%	200V
C811	1-162-318-11	CERAMIC	0.001MF	10%	500V
C812	1-136-086-00	FILM	0.017MF	3%	2KV
C816	1-107-636-11	ELECT	10MF	20%	160V
C820	1-161-754-00	CERAMIC	0.001MF	10%	2KV
C821	1-104-999-11	MYLAR	0.1MF	10%	200V
C822	1-136-541-11	FILM	1.5MF	5%	200V
C823	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C825	1-107-364-11	MYLAR	0.01MF	10%	200V
C850	1-124-480-11	ELECT	470MF	20%	25V
C852	1-104-574-11	CERAMIC	0.0047MF	10%	2KV
C853	1-162-318-11	CERAMIC	0.001MF	10%	500V
C854	1-124-480-11	ELECT	470MF	20%	25V
C856	1-162-318-11	CERAMIC	0.001MF	10%	500V
C857	1-136-165-00	FILM	0.1MF	5%	50V
C860	1-102-228-00	CERAMIC	470PF	10%	500V
C861	1-107-654-11	ELECT	33MF	20%	250V
C875	1-126-967-11	ELECT	47MF	20%	50V
C876	1-107-369-11	MYLAR	0.068MF	10%	100V
C891	1-163-007-11	CERAMIC CHIP	680PF	10%	50V
C898	1-107-369-11	MYLAR	0.068MF	10%	100V
C901	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C902	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C1201	1-104-665-11	ELECT	100MF	20%	16V
C1202	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1203	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1204	1-104-665-11	ELECT	100MF	20%	16V
C1205	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1206	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1210	1-104-665-11	ELECT	100MF	20%	16V
C1212	1-126-960-11	ELECT	1MF	20%	50V
C1213	1-126-960-11	ELECT	1MF	20%	50V
C1214	1-126-964-11	ELECT	10MF	20%	50V
C1215	1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C1216	1-164-005-11	CERAMIC CHIP	0.47MF		25V
C1217	1-104-665-11	ELECT	100MF	20%	16V
C1218	1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C1219	1-104-665-11	ELECT	100MF	20%	16V
C1221	1-164-005-11	CERAMIC CHIP	0.47MF		25V
C1222	1-164-005-11	CERAMIC CHIP	0.47MF		25V
C1223	1-164-346-11	CERAMIC CHIP	1MF		16V
C1224	1-216-295-91	SHORT	0		
C1225	1-164-005-11	CERAMIC CHIP	0.47MF		25V
C1226	1-126-934-11	ELECT	220MF	20%	16V
C1228	1-164-346-11	CERAMIC CHIP	1MF		16V
C1513	1-126-968-11	ELECT	100MF	20%	50V

<CONNECTOR>

CN101	*	1-508-797-00	PIN, CONNECTOR 4P
CN102	*	1-564-508-11	PLUG, CONNECTOR 5P
CN103	*	1-564-509-11	PLUG, CONNECTOR 6P
CN106	*	1-770-747-11	CONNECTOR, BOARD TO BOARD 12P
CN111	*	1-564-505-11	PLUG, CONNECTOR 2P
CN251	*	1-564-507-11	PLUG, CONNECTOR 4P
CN601	*	1-580-843-11	PIN, CONNECTOR (POWER)
CN602	*	1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P
CN603	*	1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P
CN604		1-695-915-11	TAB (CONTACT)
CN605		1-695-915-11	TAB (CONTACT)
CN609	*	1-564-506-11	PLUG, CONNECTOR 3P
CN811		1-695-915-11	TAB (CONTACT)
CN812		1-695-915-11	TAB (CONTACT)
CN813		1-695-915-11	TAB (CONTACT)
CN816		1-695-915-11	TAB (CONTACT)
CN817		1-695-915-11	TAB (CONTACT)
CN818		1-695-915-11	TAB (CONTACT)
CN851	*	1-508-766-00	PIN, CONNECTOR (5MM PITCH) 4P

<TRIMMER>

CT55	1-404-801-11	TRAP, CERAMIC

<DIODE>

D001	8-719-109-81	DIODE RD4.7ESB2
D002	8-719-911-19	DIODE 1SS119-25
D003	8-719-041-97	DIODE MA113-(TX)
D005	8-719-109-84	DIODE RD5.1ESB1
D008	8-719-109-89	DIODE RD5.6ESB2
D103	8-719-914-42	DIODE DA204K
D251	8-719-911-19	DIODE 1SS119-25
D252	8-719-914-42	DIODE DA204K
D301	8-719-041-97	DIODE MA113-(TX)
D305	8-719-041-97	DIODE MA113-(TX)
D306	8-719-911-19	DIODE 1SS119-25
D307	8-719-911-19	DIODE 1SS119-25
D308	8-719-109-54	DIODE RD2.2ESB2
D310	8-719-041-97	DIODE MA113-(TX)
D311	8-719-109-68	DIODE RD3.6ESB1
D312	8-719-070-15	DIODE NNCD8.2A-T1
D315	8-719-070-16	DIODE NNCD9.1A-T1
D351	8-719-908-03	DIODE GP08D
D399	8-719-977-22	DIODE DTZ9.1
D403	8-719-911-19	DIODE 1SS119-25
D513	8-719-109-84	DIODE RD5.1ESB1
D551	8-719-908-03	DIODE GP08D
D561	8-719-911-19	DIODE 1SS119-25
D591	8-719-911-19	DIODE 1SS119-25
D601	8-719-052-84	DIODE LN4SB60
D602	8-719-108-18	THYRISTOR 5P6M
D603	8-719-110-36	DIODE RD13ESB2
D604	8-719-312-10	DIODE RU4AM-T3
D605	8-719-067-18	DIODE RN4Z
D606	8-719-510-73	DIODE S3L20UF4
D607	8-719-510-26	DIODE D1NL20
D609	8-719-510-26	DIODE D1NL20
D610	8-719-510-26	DIODE D1NL20
D611	8-719-510-26	DIODE D1NL20
D801	8-719-945-80	DIODE ERC06-15S
D802	8-719-900-26	DIODE ERD29-08J
D851	8-719-302-43	DIODE EL1Z
D852	8-719-028-72	DIODE RGP02-17EL-6433
D853	8-719-302-43	DIODE EL1Z
D855	8-719-302-43	DIODE EL1Z
D857	8-719-908-03	DIODE GP08D
D858	8-719-908-03	DIODE GP08D

A

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
D860	8-719-911-19	DIODE 1SS119-25	
D891	8-719-945-80	DIODE ERC06-15S	
D901	8-719-054-60	DIODE LNK0220022G	
D1201	8-719-070-16	DIODE NNCD9.1A-T1	
D1202	8-719-070-16	DIODE NNCD9.1A-T1	
D1203	8-719-070-16	DIODE NNCD9.1A-T1	
D1207	8-719-070-16	DIODE NNCD9.1A-T1	
D1208	8-719-070-16	DIODE NNCD9.1A-T1	
D1209	8-719-070-16	DIODE NNCD9.1A-T1	
D1504	8-719-911-19	DIODE 1SS119-25	
D1505	8-719-109-81	DIODE RD4.7ESB2	
		<FERRITE BEAD>	
FB101	1-410-397-21	FERRITE 1.1UH	
FB102	1-410-397-21	FERRITE 1.1UH	
FB251	1-410-397-21	FERRITE 1.1UH	
FB601	1-410-397-21	FERRITE 1.1UH	
FB603	1-410-397-21	FERRITE 1.1UH	
FB610	1-410-397-21	FERRITE 1.1UH	
FB612	1-410-397-21	FERRITE 1.1UH	
FB801	1-420-872-00	COIL, AIR CORE	
		<IC>	
IC001	8-752-886-04	IC CXP85224A-072S	
IC002	8-759-805-37	IC L78LR05D-MA	
IC003	8-759-370-34	IC ST24C08FB6	
IC004	8-742-041-12	HYB IC SBX1981-11	
IC201	8-759-090-21	IC TDA8424	
IC202	8-759-708-12	IC NJM78L12A	
IC203	8-759-336-30	IC TA8223K	
IC300	8-759-365-26	IC TDA8375A	
IC351	8-759-565-20	IC TDA4665T/V5-118	
IC521	8-759-195-63	IC PQ09RE11	
IC551	8-759-801-98	IC LA7830	
IC601	8-749-014-01	IC STR-S6708N	
IC602	8-749-920-61	IC SE-135N	
IC603 ⚠	8-749-010-64	PHOTO COUPLER PC123F2	
IC801	8-759-100-96	IC UPC4558G2	
IC1201	8-759-157-40	IC UPC574J	
IC1203	8-759-231-53	IC TA7805S	
IC1210	8-759-100-96	IC UPC4558G2	
IC1211	8-759-711-23	IC NJM2234L	
IC1212	8-759-711-23	IC NJM2234L	
		<JACK>	
J251	1-770-786-11	JACK	
J1201	1-770-661-11	JACK BLOCK, PIN 6P	
J1202	1-695-585-11	JACK BLOCK, PIN (L TYPE) 3P	
		<CHIP CONDUCTOR>	
JR050	1-216-295-91	SHORT 0	
JR052	1-216-295-91	SHORT 0	
JR101	1-216-295-91	SHORT 0	
JR103	1-216-295-91	SHORT 0	
JR107	1-216-295-91	SHORT 0	
JR108	1-216-295-91	SHORT 0	
JR112	1-216-295-91	SHORT 0	
JR115	1-216-295-91	SHORT 0	
JR116	1-216-295-91	SHORT 0	
JR117	1-216-295-91	SHORT 0	
		<COIL>	
L001	1-408-397-00	INDUCTOR 1UH	
L002	1-410-509-11	INDUCTOR 10UH	
L003	1-408-605-31	INDUCTOR 15UH	
L101	1-410-470-11	INDUCTOR 10UH	
L301	1-408-598-31	INDUCTOR 3.9UH	
L401	1-410-498-11	INDUCTOR 1.2UH	
L402	1-410-510-11	INDUCTOR 12UH	
L406	1-410-507-11	INDUCTOR 6.8UH	
L410	1-410-501-11	INDUCTOR 2.2UH	
L802	1-412-527-11	INDUCTOR 15UH	
L804	1-459-075-00	COIL,DYNAMIC CONVERSION CHOKE	
L805	1-416-207-11	COIL, HORIZONTAL LINEARITY	
L807	1-459-390-00	INDUCTOR 390UH	
L808	1-412-553-11	INDUCTOR 3.3MMH	
L821	1-459-111-00	INDUCTOR 10MMH	
L850	1-408-947-00	INDUCTOR 2.2MMH	
		<TRANSISTOR>	
Q030	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q108	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q109	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q110	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q202	8-729-216-22	TRANSISTOR 2SA1162-G	
Q207	8-729-216-22	TRANSISTOR 2SA1162-G	
Q208	8-729-421-19	TRANSISTOR UN2213	
Q209	8-729-424-67	TRANSISTOR UN2216	
Q210	8-729-424-67	TRANSISTOR UN2216	
Q301	8-729-421-22	TRANSISTOR UN2211	
Q302	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q303	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q401	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q402	8-729-922-66	TRANSISTOR 2SC2410SN	
Q406	8-729-216-22	TRANSISTOR 2SA1162-G	
Q408	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q409	8-729-216-22	TRANSISTOR 2SA1162-G	
Q414	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q561	8-729-200-17	TRANSISTOR 2SA1091-O	
Q601	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q801	8-729-140-50	TRANSISTOR 2SC3209LK	
Q802	8-729-016-32	TRANSISTOR 2SC4927-01	
Q821	8-729-018-99	TRANSISTOR 2SD2394-F	
Q902	8-729-421-19	TRANSISTOR UN2213	
Q903	8-729-421-19	TRANSISTOR UN2213	
Q1201	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1202	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1203	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1204	8-729-216-22	TRANSISTOR 2SA1162-G	
Q1205	8-729-216-22	TRANSISTOR 2SA1162-G	
Q1207	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1208	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1264	8-729-424-67	TRANSISTOR UN2216	
Q1265	8-729-424-67	TRANSISTOR UN2216	
Q1513	8-729-422-27	TRANSISTOR 2SD601A-Q	

A

REF. NO.	PART NO.	DESCRIPTION			REMARK
		<RESISTOR>			
R001	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R002	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R003	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R004	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R007	1-216-073-00	RES,CHIP	10K	5%	1/10W
R008	1-216-049-91	RES,CHIP	1K	5%	1/10W
R010	1-216-049-91	RES,CHIP	1K	5%	1/10W
R012	1-216-017-91	RES,CHIP	47	5%	1/10W
R013	1-216-049-91	RES,CHIP	1K	5%	1/10W
R015	1-216-043-91	RES,CHIP	560	5%	1/10W
R016	1-216-049-91	RES,CHIP	1K	5%	1/10W
R017	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R018	1-216-033-00	RES,CHIP	220	5%	1/10W
R019	1-216-101-00	RES,CHIP	150K	5%	1/10W
R020	1-216-025-91	RES,CHIP	100	5%	1/10W
R021	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R025	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R027	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R028	1-216-025-91	RES,CHIP	100	5%	1/10W
R029	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R031	1-216-049-91	RES,CHIP	1K	5%	1/10W
R032	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R033	1-216-049-91	RES,CHIP	1K	5%	1/10W
R035	1-216-049-91	RES,CHIP	1K	5%	1/10W
R036	1-216-049-91	RES,CHIP	1K	5%	1/10W
R037	1-216-049-91	RES,CHIP	1K	5%	1/10W
R038	1-216-033-00	RES,CHIP	220	5%	1/10W
R040	1-216-033-00	RES,CHIP	220	5%	1/10W
R041	1-216-025-91	RES,CHIP	100	5%	1/10W
R042	1-216-039-00	RES,CHIP	390	5%	1/10W
R045	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R047	1-216-025-91	RES,CHIP	100	5%	1/10W
R048	1-216-025-91	RES,CHIP	100	5%	1/10W
R053	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R054	1-216-073-00	RES,CHIP	10K	5%	1/10W
R057	1-216-049-91	RES,CHIP	1K	5%	1/10W
R058	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R060	1-216-037-00	RES,CHIP	330	5%	1/10W
R061	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R062	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R063	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R065	1-216-033-00	RES,CHIP	220	5%	1/10W
R066	1-216-033-00	RES,CHIP	220	5%	1/10W
R067	1-216-033-00	RES,CHIP	220	5%	1/10W
R068	1-216-025-91	RES,CHIP	100	5%	1/10W
R071	1-216-037-00	RES,CHIP	330	5%	1/10W
R076	1-216-025-91	RES,CHIP	100	5%	1/10W
R077	1-216-025-91	RES,CHIP	100	5%	1/10W
R090	1-216-073-00	RES,CHIP	10K	5%	1/10W
R101	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R102	1-216-049-91	RES,CHIP	1K	5%	1/10W
R113	1-216-081-00	RES,CHIP	22K	5%	1/10W
R114	1-216-041-00	RES,CHIP	470	5%	1/10W
R115	1-216-081-00	RES,CHIP	22K	5%	1/10W
R116	1-216-081-00	RES,CHIP	22K	5%	1/10W
R117	1-216-081-00	RES,CHIP	22K	5%	1/10W
R118	1-216-081-00	RES,CHIP	22K	5%	1/10W
R119	1-216-055-00	RES,CHIP	1.8K	5%	1/10W
R120	1-216-109-00	RES,CHIP	330K	5%	1/10W
R131	1-216-464-11	METAL OXIDE	18K	5%	2W F

REF. NO.	PART NO.	DESCRIPTION			REMARK
R180	1-216-033-00	RES,CHIP	220	5%	1/10W
R181	1-216-033-00	RES,CHIP	220	5%	1/10W
R182	1-216-033-00	RES,CHIP	220	5%	1/10W
R203	1-216-033-00	RES,CHIP	220	5%	1/10W
R204	1-216-033-00	RES,CHIP	220	5%	1/10W
R241	1-216-035-00	RES,CHIP	270	5%	1/10W
R242	1-216-035-00	RES,CHIP	270	5%	1/10W
R243	1-216-073-00	RES,CHIP	10K	5%	1/10W
R244	1-216-073-00	RES,CHIP	10K	5%	1/10W
R245	1-216-067-00	RES,CHIP	5.6K	5%	1/10W
R246	1-216-067-00	RES,CHIP	5.6K	5%	1/10W
R247	1-216-053-00	RES,CHIP	1.5K	5%	1/10W
R248	1-216-053-00	RES,CHIP	1.5K	5%	1/10W
R249	1-216-049-91	RES,CHIP	1K	5%	1/10W
R250	1-216-049-91	RES,CHIP	1K	5%	1/10W
R251	1-216-295-91	SHORT	0		
R252	1-249-411-11	CARBON	330	5%	1/4W
R253	1-216-073-00	RES,CHIP	10K	5%	1/10W
R254	1-249-389-11	CARBON	4.7	5%	1/4W
R255	1-249-389-11	CARBON	4.7	5%	1/4W
R256	1-249-411-11	CARBON	330	5%	1/4W
R264	1-216-061-00	RES,CHIP	3.3K	5%	1/10W
R265	1-216-061-00	RES,CHIP	3.3K	5%	1/10W
R266	1-216-089-91	RES,CHIP	47K	5%	1/10W
R302	1-216-295-91	SHORT	0		
R303	1-216-025-91	RES,CHIP	100	5%	1/10W
R304	1-216-025-91	RES,CHIP	100	5%	1/10W
R305	1-216-025-91	RES,CHIP	100	5%	1/10W
R306	1-216-025-91	RES,CHIP	100	5%	1/10W
R307	1-216-025-91	RES,CHIP	100	5%	1/10W
R308	1-216-033-00	RES,CHIP	220	5%	1/10W
R309	1-216-033-00	RES,CHIP	220	5%	1/10W
R310	1-216-097-91	RES,CHIP	100K	5%	1/10W
R311	1-216-075-00	RES,CHIP	12K	5%	1/10W
R312	1-216-025-91	RES,CHIP	100	5%	1/10W
R313	1-216-089-91	RES,CHIP	47K	5%	1/10W
R314	1-216-295-91	SHORT	0		
R315	1-216-295-91	SHORT	0		
R316	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R317	1-216-049-91	RES,CHIP	1K	5%	1/10W
R318	1-216-099-00	RES,CHIP	120K	5%	1/10W
R319	1-216-123-11	RES,CHIP	1.2M	5%	1/10W
R320	1-216-083-00	RES,CHIP	27K	5%	1/10W
R321	1-216-689-11	METAL CHIP	39K	0.50%	1/10W
R322	1-216-083-00	RES,CHIP	27K	5%	1/10W
R325	1-216-037-00	RES,CHIP	330	5%	1/10W
R326	1-216-039-00	RES,CHIP	390	5%	1/10W
R327	1-216-029-00	RES,CHIP	150	5%	1/10W
R328	1-216-029-00	RES,CHIP	150	5%	1/10W
R329	1-216-029-00	RES,CHIP	150	5%	1/10W
R330	1-216-049-91	RES,CHIP	1K	5%	1/10W
R331	1-216-115-00	RES,CHIP	560K	5%	1/10W
R332	1-216-033-00	RES,CHIP	220	5%	1/10W
R334	1-216-041-00	RES,CHIP	470	5%	1/10W
R335	1-216-073-00	RES,CHIP	10K	5%	1/10W
R336	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R338	1-216-295-91	SHORT	0		
R341	1-216-049-91	RES,CHIP	1K	5%	1/10W
R342	1-216-036-00	RES,CHIP	300	5%	1/10W
R343	1-216-035-00	RES,CHIP	270	5%	1/10W

A

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION			REMARK
R344	1-216-129-00	RES,CHIP	2.2M	5%	1/10W
R351	1-216-001-00	RES,CHIP	10	5%	1/10W
R355	1-216-001-00	RES,CHIP	10	5%	1/10W
R356	1-216-049-91	RES,CHIP	1K	5%	1/10W
R357	1-216-105-91	RES,CHIP	220K	5%	1/10W
R360	1-208-291-11	RES,CHIP	4.7M	5%	1/10W
R401	1-216-085-00	RES,CHIP	33K	5%	1/10W
R402	1-216-081-00	RES,CHIP	22K	5%	1/10W
R403	1-216-021-00	RES,CHIP	68	5%	1/10W
R404	1-216-035-00	RES,CHIP	270	5%	1/10W
R406	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R407	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R408	1-216-055-00	RES,CHIP	1.8K	5%	1/10W
R409	1-216-025-91	RES,CHIP	100	5%	1/10W
R414	1-216-041-00	RES,CHIP	470	5%	1/10W
R416	1-216-033-00	RES,CHIP	220	5%	1/10W
R419	1-216-049-91	RES,CHIP	1K	5%	1/10W
R420	1-216-039-00	RES,CHIP	390	5%	1/10W
R421	1-216-033-00	RES,CHIP	220	5%	1/10W
R424	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R425	1-216-039-00	RES,CHIP	390	5%	1/10W
R426	1-216-029-00	RES,CHIP	150	5%	1/10W
R429	1-216-031-00	RES,CHIP	180	5%	1/10W
R433	1-216-081-00	RES,CHIP	22K	5%	1/10W
R434	1-216-041-00	RES,CHIP	470	5%	1/10W
R440	1-216-029-00	RES,CHIP	150	5%	1/10W
R441	1-216-021-00	RES,CHIP	68	5%	1/10W
R521	1-216-049-91	RES,CHIP	1K	5%	1/10W
R552	1-216-113-00	RES,CHIP	470K	5%	1/10W
R553	1-216-089-91	RES,CHIP	47K	5%	1/10W
R554	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
R555	1-249-429-11	CARBON	10K	5%	1/4W
R556	1-216-049-91	RES,CHIP	1K	5%	1/10W
R557	1-216-055-00	RES,CHIP	1.8K	5%	1/10W
R560	1-216-067-00	RES,CHIP	5.6K	5%	1/10W
R561	1-249-421-11	CARBON	2.2K	5%	1/4W
R562	1-249-420-11	CARBON	1.8K	5%	1/4W F
R563	1-260-126-11	CARBON	180K	5%	1/2W
R564	1-216-091-00	RES,CHIP	56K	5%	1/10W
R565	1-216-091-00	RES,CHIP	56K	5%	1/10W
R566	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R569	1-260-354-71	CARBON	150K	5%	1/2W
R570	1-216-295-91	SHORT	0		
R571	1-216-033-00	RES,CHIP	220	5%	1/10W
R603	1-249-416-11	CARBON	820	5%	1/4W F
R604	1-249-416-11	CARBON	820	5%	1/4W F
R606	1-215-915-11	METAL OXIDE	470	5%	3W F
R610	1-215-924-00	METAL OXIDE	15K	5%	3W F
R611	1-202-933-61	FUSIBLE	0.1	10%	1/2W F
R612	1-219-134-11	FUSIBLE	0.1	10%	1/4W
R613	1-219-134-11	FUSIBLE	0.1	10%	1/4W
R614	1-215-877-11	METAL OXIDE	22K	5%	1W F
R615	1-249-389-11	CARBON	4.7	5%	1/4W
R616	⚠ 1-218-265-91	METAL	8.2M	5%	1W
R617	1-215-924-00	METAL OXIDE	15K	5%	3W F
R618	1-219-134-11	FUSIBLE	0.1	10%	1/4W
R619	1-219-134-11	FUSIBLE	0.1	10%	1/4W
R620	1-202-962-11	CEMENTED	3.3	5%	10W
R622	1-217-191-21	WIREWOUND	0.18	10%	2W F
R623	1-247-807-31	CARBON	100	5%	1/4W

REF. NO.	PART NO.	DESCRIPTION			REMARK
R624	1-215-881-11	METAL OXIDE	15	5%	2W F
R625	1-249-424-11	CARBON	3.9K	5%	1/4W
R626	1-249-420-11	CARBON	1.8K	5%	1/4W
R627	1-249-417-11	CARBON	1K	5%	1/4W
R628	1-249-417-11	CARBON	1K	5%	1/4W
R629	1-249-401-11	CARBON	47	5%	1/4W
R632	1-249-381-11	CARBON	1	5%	1/4W
R635	1-215-882-00	METAL OXIDE	22	5%	2W F
R636	1-215-924-00	METAL OXIDE	15K	5%	3W F
R801	1-215-945-11	METAL OXIDE	3.3K	5%	5W F
R802	1-249-381-11	CARBON	1	5%	1/4W F
R803	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R804	1-216-049-91	RES,CHIP	1K	5%	1/10W
R805	1-216-081-00	RES,CHIP	22K	5%	1/10W
R809	1-247-756-11	CARBON	2.2K	5%	1/2W F
R811	1-216-346-00	METAL OXIDE	0.56	5%	1W F
R812	1-216-075-00	RES,CHIP	12K	5%	1/10W
R816	1-249-437-11	CARBON	47K	5%	1/4W
R820	1-216-053-00	RES,CHIP	1.5K	5%	1/10W
R821	1-215-910-00	METAL OXIDE	68	5%	3W F
R822	1-216-429-00	METAL OXIDE	270	5%	1W F
R823	1-247-756-11	CARBON	2.2K	5%	1/2W F
R825	1-249-392-11	CARBON	8.2	5%	1/4W F
R826	1-216-059-00	RES,CHIP	2.7K	5%	1/10W
R827	1-216-097-91	RES,CHIP	100K	5%	1/10W
R828	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R829	1-216-053-00	RES,CHIP	1.5K	5%	1/10W
R831	1-215-861-00	METAL OXIDE	47	5%	1W F
R832	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R834	1-216-073-00	RES,CHIP	10K	5%	1/10W
R851	1-249-448-11	CARBON	1.2	5%	1/4W F
R852	1-249-417-11	CARBON	1K	5%	1/4W F
R853	1-249-377-11	CARBON	0.47	5%	1/4W F
R854	1-249-377-11	CARBON	0.47	5%	1/4W F
R855	1-202-818-00	SOLID	1K	20%	1/2W
R856	1-249-431-11	CARBON	15K	5%	1/4W
R857	1-249-438-11	CARBON	56K	5%	1/4W
R858	1-216-370-11	METAL OXIDE	1.2	5%	2W F
R860	1-247-887-00	CARBON	220K	5%	1/4W
R881	1-216-043-91	RES,CHIP	560	5%	1/10W
R882	1-216-059-00	RES,CHIP	2.7K	5%	1/10W
R883	1-216-121-91	RES,CHIP	1M	5%	1/10W
R895	1-216-348-00	METAL OXIDE	0.82	5%	1W F
R898	1-249-421-11	CARBON	2.2K	5%	1/4W
R902	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R904	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R905	1-216-049-91	RES,CHIP	1K	5%	1/10W
R906	1-216-049-91	RES,CHIP	1K	5%	1/10W
R907	1-216-055-00	RES,CHIP	1.8K	5%	1/10W
R908	1-216-055-00	RES,CHIP	1.8K	5%	1/10W
R909	1-216-061-00	RES,CHIP	3.3K	5%	1/10W
R910	1-216-061-00	RES,CHIP	3.3K	5%	1/10W
R911	1-216-071-00	RES,CHIP	8.2K	5%	1/10W
R913	1-216-041-00	RES,CHIP	470	5%	1/10W
R914	1-216-041-00	RES,CHIP	470	5%	1/10W
R915	1-216-071-00	RES,CHIP	8.2K	5%	1/10W
R1201	1-216-023-00	RES,CHIP	82	5%	1/10W
R1202	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1203	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1204	1-216-089-91	RES,CHIP	47K	5%	1/10W

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A **A3**

REF. NO.	PART NO.	DESCRIPTION			REMARK
R1205	1-216-023-00	RES,CHIP	82	5%	1/10W
R1206	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1207	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1211	1-216-021-00	RES,CHIP	68	5%	1/10W
R1212	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1213	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1214	1-216-113-00	RES,CHIP	470K	5%	1/10W
R1215	1-216-113-00	RES,CHIP	470K	5%	1/10W
R1216	1-216-113-00	RES,CHIP	470K	5%	1/10W
R1218	1-216-041-00	RES,CHIP	470	5%	1/10W
R1219	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1220	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1221	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1222	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1223	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1224	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1226	1-216-689-11	RES,CHIP	39K	5%	1/10W
R1227	1-216-689-11	RES,CHIP	39K	5%	1/10W
R1228	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1229	1-216-041-00	RES,CHIP	470	5%	1/10W
R1230	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1231	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1232	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R1233	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1234	1-216-689-11	RES,CHIP	39K	5%	1/10W
R1235	1-216-689-11	RES,CHIP	39K	5%	1/10W
R1239	1-249-389-11	CARBON	4.7	5%	1/4W F
R1240	1-216-025-91	RES,CHIP	100	5%	1/10W
R1241	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1242	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1243	1-216-025-91	RES,CHIP	100	5%	1/10W
R1244	1-216-025-91	RES,CHIP	100	5%	1/10W
R1245	1-216-037-00	RES,CHIP	330	5%	1/10W
R1246	1-216-037-00	RES,CHIP	330	5%	1/10W
R1247	1-216-041-00	RES,CHIP	470	5%	1/10W
R1248	1-216-051-00	RES,CHIP	1.2K	5%	1/10W
R1249	1-216-041-00	RES,CHIP	470	5%	1/10W
R1513	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1514	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1515	1-216-025-91	RES,CHIP	100	5%	1/10W
		<VARIABLE RESISTOR>			
RV301	1-241-769-11	RES, ADJ, CARBON 470K			
		<SWITCH>			
S601	⚠ 1-571-433-31	SWITCH, PUSH (AC POWER)			
S801	1-572-707-11	SWITCH, LEVER			
S901	1-570-577-11	SWITCH, PUSH			
S902	1-570-577-11	SWITCH, PUSH			
S903	1-570-577-11	SWITCH, PUSH			
S904	1-570-577-11	SWITCH, PUSH			
S905	1-570-577-11	SWITCH, PUSH			
		<SPARK GAP>			
SG801	1-519-422-11	GAP, SPARK			

REF. NO.	PART NO.	DESCRIPTION			REMARK
		<SURFACE WAVE FILTER>			
SWF401	1-577-169-12	SAWF			
		<TRANSFORMER>			
T601	⚠ 1-429-139-41	TRANSFORMER, CONVERTER (SRT)			
T605	⚠ 1-424-461-11	TRANSFORMER, LINE FILTER			
T801	1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE			
T851	⚠ 1-453-190-11	TRANSFORMER ASSY, FLYBACK(NX-2743//M3B)			
		<THERMISTOR>			
THP601	⚠1-810-961-11	THERMISTOR, POSITIVE			
		<TUNER>			
TU101	⚠ 8-598-323-50	VSS TUNER BT-AG401			
		<CRYSTAL>			
X101	1-577-358-21	VIBRATOR, CERAMIC			
X300	1-411-752-11	COIL			
X358	1-567-505-11	OSCILLATOR, CRYSTAL			
X443	1-567-504-11	OSCILLATOR, CRYSTAL			
**********					
	* A-1297-523-A	A3 BOARD, COMPLETE			
		**********			
		<CAPACITOR>			
C1201	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C1202	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1205	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C1206	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C1207	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C1208	1-163-083-00	CERAMIC CHIP	1PF	0.25PF	50V
C1209	1-163-109-00	CERAMIC CHIP	47PF	5%	50V
C1210	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C1211	1-124-584-00	ELECT	100MF	20%	10V
C1212	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C1213	1-126-151-11	ELECT	4.7MF	20%	16V
C1214	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C1215	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C1216	1-124-465-00	ELECT	0.47MF	20%	50V
C1217	1-163-033-91	CERAMIC CHIP	0.022MF		50V
C1218	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C1219	1-124-584-00	ELECT	100MF	20%	10V
C1221	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1222	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1223	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1224	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1225	1-163-093-00	CERAMIC CHIP	10PF	5%	50V
C1226	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C1227	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C1228	1-163-131-00	CERAMIC CHIP	390PF	5%	50V

A3

REF. NO.	PART NO.	DESCRIPTION			REMARK
C1229	1-126-157-11	ELECT	10MF	20%	16V
C1230	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1231	1-126-157-11	ELECT	10MF	20%	16V
C1232	1-124-234-00	ELECT	22MF	20%	16V
C1233	1-126-162-11	ELECT	3.3MF	20%	50V
C1234	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1235	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C1236	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C1237	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C1238	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1239	1-126-157-11	ELECT	10MF	20%	16V
C1240	1-164-222-11	CERAMIC CHIP	0.22MF		25V
C1241	1-124-589-11	ELECT	47MF	20%	16V
C1242	1-104-760-11	CERAMIC CHIP	0.047MF	10%	50V
C1243	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C1244	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C1245	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C1246	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C1247	1-163-229-11	CERAMIC CHIP	12PF	5%	50V
C1248	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C1250	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C1252	1-216-295-91	SHORT	0		
C1253	1-216-295-91	SHORT	0		
C1254	1-124-234-00	ELECT	22MF	20%	16V
C1255	1-124-584-00	ELECT	100MF	20%	10V
C1256	1-164-005-11	CERAMIC CHIP	0.47MF		25V
C1257	1-164-222-11	CERAMIC CHIP	0.22MF		25V
C1258	1-163-033-91	CERAMIC CHIP	0.022MF		50V
C1260	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C1262	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C1263	1-163-137-00	CERAMIC CHIP	680PF	5%	50V
C1264	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C1265	1-124-234-00	ELECT	22MF	20%	16V
C1266	1-124-589-11	ELECT	47MF	20%	16V
C1267	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1268	1-124-584-00	ELECT	100MF	20%	10V
		<CONNECTOR>			
CN1201	1-691-109-11	PLUG (L TYPE) 12P			
		<DIODE>			
D1201	8-719-908-03	DIODE GP08D			
		<FERRITE BEAD>			
FB1201	1-412-911-11	FERRITE	0UH		
FB1202	1-412-911-11	FERRITE	0UH		
FB1203	1-412-911-11	FERRITE	0UH		
FB1204	1-412-911-11	FERRITE	0UH		
FB1205	1-412-911-11	FERRITE	0UH		
FB1206	1-412-911-11	FERRITE	0UH		
		<FILTER>			
FL1201	1-239-803-11	ENCAPSULATED COMPONENT			

REF. NO.	PART NO.	DESCRIPTION			REMARK
		<IC>			
IC1201	8-752-059-57	IC CXA1110BS			
IC1202	8-759-493-49	IC MSP3410D-PP-B4			
IC1203	8-759-701-75	IC NJM7805FA			
		<CHIP CONDUCTOR>			
JR1	1-216-295-91	SHORT	0		
JR2	1-216-295-91	SHORT	0		
JR3	1-216-295-91	SHORT	0		
JR4	1-216-295-91	SHORT	0		
JR5	1-216-295-91	SHORT	0		
JR6	1-216-295-91	SHORT	0		
JR7	1-216-295-91	SHORT	0		
JR8	1-216-295-91	SHORT	0		
JR9	1-216-295-91	SHORT	0		
JR10	1-216-295-91	SHORT	0		
JR11	1-216-295-91	SHORT	0		
		<COIL>			
L1201	1-408-593-31	INDUCTOR	1.5UH		
L1202	1-412-010-41	INDUCTOR CHIP	22UH		
L1203	1-408-602-31	INDUCTOR	8.2UH		
L1204	1-408-591-11	INDUCTOR	1UH		
L1205	1-408-602-31	INDUCTOR	8.2UH		
L1206	1-412-951-11	INDUCTOR	10UH		
L1207	1-412-951-11	INDUCTOR	10UH		
		<TRANSISTOR>			
Q1201	8-729-230-49	TRANSISTOR 2SC2712-YG			
Q1203	8-729-266-92	TRANSISTOR 2SC2669-O			
Q1205	8-729-216-22	TRANSISTOR 2SA1162-G			
Q1206	8-729-216-22	TRANSISTOR 2SA1162-G			
Q1207	8-729-230-49	TRANSISTOR 2SC2712-YG			
Q1211	8-729-230-49	TRANSISTOR 2SC2712-YG			
Q1212	8-729-230-49	TRANSISTOR 2SC2712-YG			
		<RESISTOR>			
R1201	1-216-022-00	RES,CHIP	75	5%	1/10W
R1202	1-216-085-00	RES,CHIP	33K	5%	1/10W
R1203	1-216-081-00	RES,CHIP	22K	5%	1/10W
R1204	1-216-035-00	RES,CHIP	270	5%	1/10W
R1205	1-216-027-00	RES,CHIP	120	5%	1/10W
R1207	1-216-053-00	RES,CHIP	1.5K	5%	1/10W
R1209	1-216-035-00	RES,CHIP	270	5%	1/10W
R1210	1-216-041-00	RES,CHIP	470	5%	1/10W
R1211	1-216-015-00	RES,CHIP	39	5%	1/10W
R1212	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1213	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1214	1-216-033-00	RES,CHIP	220	5%	1/10W
R1217	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1218	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1219	1-216-047-91	RES,CHIP	820	5%	1/10W
R1220	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1223	1-216-051-00	RES,CHIP	1.2K	5%	1/10W
R1224	1-216-059-00	RES,CHIP	2.7K	5%	1/10W
R1225	1-216-059-00	RES,CHIP	2.7K	5%	1/10W
R1226	1-216-295-91	SHORT	0		

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A3 C

REF. NO.	PART NO.	DESCRIPTION			REMARK
R1227	1-216-295-91	SHORT	0		
R1228	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1229	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R1230	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R1231	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1232	1-216-027-00	RES,CHIP	120	5%	1/10W
R1233	1-216-045-00	RES,CHIP	680	5%	1/10W
R1234	1-216-045-00	RES,CHIP	680	5%	1/10W
R1240	1-216-041-00	RES,CHIP	470	5%	1/10W
R1241	1-216-075-00	RES,CHIP	12K	5%	1/10W
R1242	1-216-027-00	RES,CHIP	120	5%	1/10W
R1243	1-216-037-00	RES,CHIP	330	5%	1/10W
R1244	1-216-059-00	RES,CHIP	2.7K	5%	1/10W
R1245	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1246	1-260-306-51	CARBON	15	5%	1/2W
		<SWITCH>			
SW1201	1-579-560-11	FILTER, SAWTOOTH WAVE			
SW1202	1-579-559-11	FILTER, SAWTOOTH WAVE			
		<TRANSFORMER>			
T1202	1-416-000-11	COIL			
		<CRYSTAL>			
X1201	1-760-094-11	VIBRATOR, CRYSTAL			

****

	* A-1331-743-A	C BOARD, MOUNTED				
		**********				
		<CAPACITOR>				
C701	1-162-114-00	CERAMIC	0.0047MF		2KV	
C702	1-102-074-00	CERAMIC	0.001MF	10%	50V	
C703	1-107-651-11	ELECT	4.7MF	20%	250V	
C704	1-130-202-00	FILM	0.022MF	5%	400V	
C708	1-102-114-00	CERAMIC	470PF	10%	50V	
C709	1-102-114-00	CERAMIC	470PF	10%	50V	
C710	1-102-114-00	CERAMIC	470PF	10%	50V	
C712	1-102-112-00	CERAMIC	330PF	10%	50V	
C713	1-102-112-00	CERAMIC	330PF	10%	50V	
C714	1-102-112-00	CERAMIC	330PF	10%	50V	
C716	1-126-968-11	ELECT	100MF	20%	50V	
		<CONNECTOR>				
CN701	1-508-766-00	PIN, CONNECTOR (5MM PITCH) 4P				
CN703	* 1-564-509-11	PLUG, CONNECTOR 6P				
CN704	1-695-915-11	TAB (CONTACT)				
		<DIODE>				
D701	8-719-911-19	DIODE 1SS119-25				
D702	8-719-911-19	DIODE 1SS119-25				
D703	8-719-911-19	DIODE 1SS119-25				
D707	8-719-911-19	DIODE 1SS119-25				
D708	8-719-911-19	DIODE 1SS119-25				
D709	8-719-911-19	DIODE 1SS119-25				
D710	8-719-911-19	DIODE 1SS119-25				
D711	8-719-911-19	DIODE 1SS119-25				
D712	8-719-911-19	DIODE 1SS119-25				
D716	8-719-911-19	DIODE 1SS119-25				
D717	8-719-121-26	DIODE RD9.1ESL2				
		<JACK>				
J701	⚠ 1-251-239-11	SOCKET, CRT				
		<COIL>				
L701	1-410-667-31	INDUCTOR	22UH			
		<TRANSISTOR>				
Q704	8-729-326-11	TRANSISTOR 2SC2611				
Q705	8-729-326-11	TRANSISTOR 2SC2611				
Q706	8-729-326-11	TRANSISTOR 2SC2611				
Q707	8-729-200-17	TRANSISTOR 2SA1091-O				
Q708	8-729-200-17	TRANSISTOR 2SA1091-O				
Q709	8-729-200-17	TRANSISTOR 2SA1091-O				
Q710	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q711	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q712	8-729-119-78	TRANSISTOR 2SC2785-HFE				
		<RESISTOR>				
R701	1-244-941-00	CARBON	680K	5%	1/2W	
R702	1-249-496-11	CARBON	100K	5%	1/2W	
R703	1-249-496-11	CARBON	100K	5%	1/2W	
R705	1-216-393-00	METAL OXIDE	2.2	5%	3W	F
R710	1-215-922-11	METAL OXIDE	6.8K	5%	3W	F
R711	1-260-339-11	CARBON	8.2K	5%	1/2W	
R712	1-215-922-11	METAL OXIDE	6.8K	5%	3W	F
R713	1-260-339-11	CARBON	8.2K	5%	1/2W	
R714	1-215-922-11	METAL OXIDE	6.8K	5%	3W	F
R715	1-260-339-11	CARBON	8.2K	5%	1/2W	
R719	1-215-488-00	METAL	620K	1%	1/4W	
R720	1-249-923-11	CARBON	1K	5%	1/4W	F
R721	1-215-489-00	METAL	680K	1%	1/4W	
R722	1-249-923-11	CARBON	1K	5%	1/4W	F
R723	1-215-481-00	METAL	330K	1%	1/4W	
R724	1-249-923-11	CARBON	1K	5%	1/4W	F
R725	1-249-419-11	CARBON	1.5K	5%	1/4W	
R726	1-249-419-11	CARBON	1.5K	5%	1/4W	
R727	1-249-419-11	CARBON	1.5K	5%	1/4W	
R728	1-249-407-11	CARBON	150	5%	1/4W	
R729	1-249-407-11	CARBON	150	5%	1/4W	
R730	1-249-407-11	CARBON	150	5%	1/4W	
R731	1-249-413-11	CARBON	470	5%	1/4W	
R732	1-249-413-11	CARBON	470	5%	1/4W	
R733	1-249-413-11	CARBON	470	5%	1/4W	
R734	1-247-739-11	CARBON	100	5%	1/2W	
R738	1-247-807-31	CARBON	100	5%	1/4W	
R739	1-247-807-31	CARBON	100	5%	1/4W	

V1 F1 C

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION			REMARK
R740	1-247-807-31	CARBON	100	5%	1/4W
R755	1-247-843-11	CARBON	3.3K	5%	1/4W
R756	1-247-843-11	CARBON	3.3K	5%	1/4W
R757	1-247-843-11	CARBON	3.3K	5%	1/4W
		<VARIABLE RESISTOR>			
RV701	1-230-641-11	RES, ADJ, METAL GLAZE 2.2M			
**********					
*	A-1241-190-A	F1 BOARD, MOUNTED **********			
	1-533-223-11	CLIP, FUSE			
		<CAPACITOR>			
C1601 ⚠	1-104-706-51	FILM	0.22MF	20%	250V
		<CONNECTOR>			
CN1601*	1-580-843-11	PIN, CONNECTOR (POWER)			
CN1602*	1-580-843-11	PIN, CONNECTOR (POWER)			
		<FUSE>			
F1601 ⚠	1-532-237-11	FUSE, TIME-LAG (BET) 3.15A/250V			
		<RESISTOR>			
R1601 ⚠	1-202-916-91	SOLID	5.6M	20%	1/2W
		<TRANSFORMER>			
T1601 ⚠	1-424-436-11	TRANSFORMER, LINE FILTER			
T1602 ⚠	1-424-436-11	TRANSFORMER, LINE FILTER			
**********					
*	A-1347-103-A	V1 BOARD, COMPLETE **********			
	4-049-406-01	CASE (BOTTOM LID), SHIELD			
	4-049-407-01	CASE (UPPER LID), SHIELD			
		<CAPACITOR>			
C01	1-163-037-11	CERAMIC CHIP	0.022MF	10%	50V
C02	1-124-907-11	ELECT	10MF	20%	50V
C03	1-163-037-11	CERAMIC CHIP	0.022MF	10%	50V
C04	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C05	1-124-907-11	ELECT	10MF	20%	50V
C06	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V
C07	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C08	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C09	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C10	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C11	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C12	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C13	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C14	1-216-295-91	SHORT	0		
C15	1-104-668-11	ELECT	33MF	20%	35V
C16	1-126-963-11	ELECT	4.7MF	20%	50V
C17	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C19	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C20	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C22	1-126-791-11	ELECT	10MF	20%	16V
C23	1-163-038-91	CERAMIC CHIP	0.1MF		25V
C24	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C25	1-126-791-11	ELECT	10MF	20%	16V
C26	1-104-665-11	ELECT	100MF	20%	10V
C27	1-104-665-11	ELECT	100MF	20%	16V
C28	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C29	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C30	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C31	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C32	1-104-665-11	ELECT	100MF	20%	10V
		<CONNECTOR>			
CN01 *	1-770-748-11	CONNECTOR, BOARD TO BOARD 12P			
		<DIODE>			
D01	8-719-105-52	DIODE RD3.6M-B2			
D03	8-719-914-43	DIODE DAN202K			
D04	8-719-105-91	DIODE RD5.6M-B2			
D05	8-719-914-44	DIODE DAP202K			
D06	8-719-914-43	DIODE DAN202K			
		<FERRITE BEAD>			
FB01	1-410-397-21	FERRITE	1.1UH		
		<IC>			
IC01	8-759-324-28	IC P83C654FBP/540			
IC02	8-759-298-63	IC SAA5281ZP/E			
		<CHIP CONDUCTOR>			
JR02	1-216-295-91	SHORT	0		
JR03	1-216-295-91	SHORT	0		
JR04	1-216-295-91	SHORT	0		
JR07	1-216-295-91	SHORT	0		
JR08	1-216-295-91	SHORT	0		
JR09	1-216-295-91	SHORT	0		
		<COIL>			
L01	1-410-464-11	INDUCTOR	3.3UH		
L03	1-410-464-11	INDUCTOR	3.3UH		
L04	1-410-464-11	INDUCTOR	3.3UH		
L05	1-410-464-11	INDUCTOR	3.3UH		
L06	1-410-464-11	INDUCTOR	3.3UH		

V1 VM

REF. NO.	PART NO.	DESCRIPTION			REMARK
		<TRANSISTOR>			
Q01	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
Q02	8-729-027-43	TRANSISTOR DTC114EKA-T146			
Q03	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
Q04	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
Q05	8-729-920-72	TRANSISTOR 2SA1037K-T-146-QR			
Q06	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
Q07	8-729-019-01	TRANSISTOR 2SD2394-EF			
Q08	8-729-140-96	TRANSISTOR 2SD774-34			
Q09	8-729-027-23	TRANSISTOR DTA114EKA-T146			
		<RESISTOR>			
R01	1-216-061-00	RES,CHIP	3.3K	5%	1/10W
R02	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R03	1-216-085-00	RES,CHIP	33K	5%	1/10W
R04	1-216-025-91	RES,CHIP	100	5%	1/10W
R05	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R06	1-216-075-00	RES,CHIP	12K	5%	1/10W
R07	1-216-025-91	RES,CHIP	100	5%	1/10W
R08	1-216-025-91	RES,CHIP	100	5%	1/10W
R09	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R10	1-216-083-00	RES,CHIP	27K	5%	1/10W
R11	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R12	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R13	1-216-061-00	RES,CHIP	3.3K	5%	1/10W
R14	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
R16	1-216-073-00	RES,CHIP	10K	5%	1/10W
R17	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R18	1-216-059-00	RES,CHIP	2.7K	5%	1/10W
R19	1-216-049-91	RES,CHIP	1K	5%	1/10W
R20	1-216-049-91	RES,CHIP	1K	5%	1/10W
R21	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R22	1-216-041-00	RES,CHIP	470	5%	1/10W
R24	1-216-025-91	RES,CHIP	100	5%	1/10W
R25	1-216-025-91	RES,CHIP	100	5%	1/10W
R26	1-216-049-91	RES,CHIP	1K	5%	1/10W
R27	1-216-071-00	RES,CHIP	8.2K	5%	1/10W
R28	1-216-025-91	RES,CHIP	100	5%	1/10W
R29	1-216-025-91	RES,CHIP	100	5%	1/10W
R30	1-216-071-00	RES,CHIP	8.2K	5%	1/10W
R31	1-216-025-91	RES,CHIP	100	5%	1/10W
R32	1-216-071-00	RES,CHIP	8.2K	5%	1/10W
R33	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R34	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R35	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R36	1-216-025-91	RES,CHIP	100	5%	1/10W
R37	1-216-049-91	RES,CHIP	1K	5%	1/10W
R38	1-260-095-11	CARBON	470	5%	1/2W
R41	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R42	1-216-077-00	RES,CHIP	15K	5%	1/10W
R43	1-216-295-91	SHORT	0		
R44	1-216-083-00	RES,CHIP	27K	5%	1/10W
R45	1-216-021-00	RES,CHIP	68	5%	1/10W
R46	1-216-021-00	RES,CHIP	68	5%	1/10W
R47	1-216-021-00	RES,CHIP	68	5%	1/10W
R48	1-216-049-91	RES,CHIP	1K	5%	1/10W
R49	1-216-049-91	RES,CHIP	1K	5%	1/10W
R50	1-216-049-91	RES,CHIP	1K	5%	1/10W

REF. NO.	PART NO.	DESCRIPTION			REMARK
		<CRYSTAL>			
X01	1-579-266-31	CRYSTAL VIBRATOR			

****

*	A-1342-396-A	VM BOARD, MOUNTED			
		**********			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
		<CAPACITOR>			
C1722	1-102-115-00	CERAMIC	560PF	10%	50V
C1724	1-101-880-00	CERAMIC	47PF	5%	50V
C1751	1-136-153-00	FILM	0.01MF	5%	50V
C1761	1-161-830-00	CERAMIC	0.0047MF		500V
C1763	1-107-638-11	ELECT	33MF	20%	160V
C1764	1-126-933-11	ELECT	100MF	20%	16V
C1768	1-106-383-00	MYLAR	0.047MF	10%	200V
C1769	1-107-667-11	ELECT	2.2MF	20%	160V
C1770	1-104-999-11	MYLAR	0.1MF	10%	200V
C1771	1-126-964-11	ELECT	10MF	20%	50V
C1772	1-126-933-11	ELECT	100MF	20%	16V
C1773	1-106-383-00	MYLAR	0.047MF	10%	200V
C1775	1-126-933-11	ELECT	100MF	20%	16V
C1776	1-126-964-11	ELECT	10MF	20%	50V
C1778	1-130-471-00	MYLAR	0.001MF	5%	50V
C1779	1-130-471-00	MYLAR	0.001MF	5%	50V
C1780	1-126-964-11	ELECT	10MF	20%	50V
		<CONNECTOR>			
CN1701*	1-564-511-61	PLUG, CONNECTOR 8P			
		<DIODE>			
D1761	8-719-911-19	DIODE 1SS119-25			
D1763	8-719-911-19	DIODE 1SS119-25			
D1764	8-719-911-19	DIODE 1SS119-25			
D1767	8-719-110-88	DIODE RD39ESB2			
D1768	8-719-110-88	DIODE RD39ESB2			
		<COIL>			
L1721	1-414-192-31	INDUCTOR	180UH		
L1722	1-414-192-31	INDUCTOR	180UH		
L1723	1-414-182-11	INDUCTOR	6.8UH		
L1761	1-410-478-11	INDUCTOR	47UH		
L1762	1-408-610-31	INDUCTOR	39UH		
		<TRANSISTOR>			
Q1722	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q1723	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q1756	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q1761	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q1762	8-729-119-76	TRANSISTOR 2SA1175-HFE			

VM

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION				REMARK
Q1763	8-729-017-05	TRANSISTOR 2SA1837				
Q1764	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q1765	8-729-017-06	TRANSISTOR 2SC4793				
Q1766	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q1767	8-729-142-86	TRANSISTOR 2SC3733				
Q1777	8-729-326-11	TRANSISTOR 2SC2611				
		<RESISTOR>				
R1721	1-249-414-11	CARBON	560	5%	1/4W	
R1722	1-249-411-11	CARBON	330	5%	1/4W	
R1723	1-249-407-11	CARBON	150	5%	1/4W	
R1724	1-247-815-91	CARBON	220	5%	1/4W	
R1725	1-249-412-11	CARBON	390	5%	1/4W	
R1727	1-247-843-11	CARBON	3.3K	5%	1/4W	
R1728	1-249-429-11	CARBON	10K	5%	1/4W	
R1732	1-126-964-11	ELECT	10MF	20%	50V	
R1736	1-249-419-11	CARBON	1.5K	5%	1/4W	
R1753	1-249-430-11	CARBON	12K	5%	1/4W	
R1762	1-247-815-91	CARBON	220	5%	1/4W	
R1764	1-247-734-11	CARBON	39	5%	1/2W	F
R1765	1-249-414-11	CARBON	560	5%	1/4W	F
R1766	1-249-418-11	CARBON	1.2K	5%	1/4W	
R1768	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1769	1-249-385-11	CARBON	2.2	5%	1/4W	F
R1770	1-249-435-11	CARBON	33K	5%	1/4W	
R1772	1-249-432-11	CARBON	18K	5%	1/4W	
R1774	1-215-912-11	METAL OXIDE	150	5%	3W	F
R1775	1-249-417-11	CARBON	1K	5%	1/4W	F
R1776	1-249-432-11	CARBON	18K	5%	1/4W	
R1777	1-249-438-11	CARBON	56K	5%	1/4W	
R1778	1-249-430-11	CARBON	12K	5%	1/4W	
R1779	1-249-414-11	CARBON	560	5%	1/4W	
R1780	1-249-418-11	CARBON	1.2K	5%	1/4W	
R1781	1-249-410-11	CARBON	270	5%	1/4W	
R1782	1-249-385-11	CARBON	2.2	5%	1/4W	F
R1784	1-247-807-31	CARBON	100	5%	1/4W	
R1785	1-249-400-11	CARBON	39	5%	1/4W	F
R1786	1-249-435-11	CARBON	33K	5%	1/4W	
R1787	1-249-429-11	CARBON	10K	5%	1/4W	
R1788	1-249-418-11	CARBON	1.2K	5%	1/4W	
R1789	1-249-413-11	CARBON	470	5%	1/4W	
R1790	1-216-451-11	METAL OXIDE	120	5%	2W	F
R1791	1-249-413-11	CARBON	470	5%	1/4W	
R1812	1-249-425-11	CARBON	4.7K	5%	1/4W	
R1851	1-249-393-11	CARBON	10	5%	1/4W	

REF. NO.	PART NO.	DESCRIPTION	REMARK
		**********	
		MISCELLANEOUS	
		**********	
⚠	1-403-619-11	COIL, DEMAGNETIZATION	
	1-452-032-00	MAGNET,DISC	
	1-452-762-31	NECK ASSEMBLY NA294	
	1-504-305-11	SPEAKER (5X12CM)	
⚠	1-574-358-12	CORD, POWER (WITH CONNECTOR) 7.5A/250V	
⚠	1-900-212-02	LEAD ASSY, FOCUS	
⚠	8-451-404-42	DEFLECTION YOKE (Y25GXA)	
⚠	8-733-255-05	PICTURE TUBE (M60KWL70X)	
		**********	
		ACCESSORIES AND PACKING MATERIALS	
		**********	
	3-701-910-00	SCREW, SPECIAL (DIA. 3.8X20)	
	3-861-432-62	MANUAL, INSTRUCTION	
*	4-039-372-01	BAG, PROTECTION	
*	4-047-806-01	CUSHION (UPPER) (ASSY)	
*	4-047-807-01	CUSHION (LOWER) (ASSY)	
*	4-047-808-01	INDIVIDUAL CARTON	
	4-392-003-11	BAND, HOLD	
	4-392-004-11	CLIP	
		**********	
		REMOTE COMMANDER	
		**********	
	1-473-323-11	REMOTE COMMANDER (RM-870)	
	9-902-546-01	BATTERY COVER, REMOTE COMMANDER	

9-965-743-01

Sony Corporation
SONY TV Industries (M) Sdn. Bhd.
TV Business of General Area

English
99EG70068-1
Printed in Malaysia
© 1999. 5